7PG23 5B3

Restricted Earth Fault

Document Release History

This document is issue 02/2010. The list of revisions up to and including this issue is:

Pre release

02/2010	Document reformat due to rebrand

Software	Revision	History
----------	----------	---------

1	I	1	

The copyright and other intellectual property rights in this document, and in any model or article produced from it (and including any registered or unregistered design rights) are the property of Siemens Protection Devices Limited. No part of this document shall be reproduced or modified or stored in another form, in any data retrieval system, without the permission of Siemens Protection Devices Limited, nor shall any model or article be reproduced from this document unless Siemens Protection Devices Limited consent.

While the information and guidance given in this document is believed to be correct, no liability shall be accepted for any loss or damage caused by any error or omission, whether such error or omission is the result of negligence or any other cause. Any and all such liability is disclaimed.



Contents

1.	Mechanical Inspection	3
2.	Test Intervals	3
3.	Defect Report Form	4

1. Mechanical Inspection

Inspect the relay for dust and dirty or tarnished contacts. Use a blower to remove dust, and if necessary clean the contacts using a stiff brush dipped in a suitable substance.

2. Test Intervals

The maintenance tests required will largely depend upon experience and site conditions, but as a general rule it is recommended that the following inspection and tests are performed every twelve months.

- Mechanical Inspection
- Check of Connections
- Insulation Resistance Test
- Fault Setting Tests by Secondary Injection
- Tests using Load Current
- Check the continuity of the neutral CT loop with a bell test set or an ohmmeter

E D EA ME TCC 6 release from 11/200

3. Defect Report Form

Form sheet for repairs and returned goods (fields marked with * are mandatory fields)

Sender:							
* Name, first name:		Complete phone number	incl. cou	ntry code):	Complete fax number (incl.	country code):	
Email address:		* Org-ID and GBK refere	nce:		* AWV:		
* Order-/ reference-no (choosing Order-no for repair:	C	ption): order-/ delivery note-no for ailure:	eturn of	commission	Beginning order-no for cred	it note demand:	
Information concerning the produ	ct and its u						
* Order Code (MLFB):		Firmware version:			* Serial number:		
* Customer:	Product wa	s in use approximately since	e:	Station/proje	ect:	Hotline Input no.:	
Customer original purchase order nu	ım ber:	Delivery note number with	position	number:	Manufacturer:		
* Type of order (choosing at leas Repair Upgrade / Modification to Type of failure:	t 1 option):	Return of commission Warranty repair For collection	failure		Credit Note Quotation (not repair V products! See prices in		
Device or module does not start	up	Mechanical problem			Overload		
Sporadic failure		Knock sensitive			Transport damage		
Permanent failure		Temperature caused f	ailure		Failure after ca	hrs in use	
Repeated breakdown		Failure after firmware	update				
Error description: Display message:	ofo)						
(use separated sheet for more in	110)						
Active LED messages:							
Faulty Interface(s), which?		Wrong measured valu	e(s), whi	ch?	Faulty input(s)/output(s), which?	
*Detailed error description (please * Shall a firmware update be made Yes, to most recent version					s? (choosing at least 1 op	,	
repair report:	,				roo, actual parameters	muct be readable	
Yes, standard report (free of cha	arge)	Yes, detailed report (c	harge: 4	DUEUR)			
Shipping address of the repaired/ Company, department	upgraded p	roduct:					
Name, first name							
Street, number							
Postcode, city, country							
Date, Signature							