
BETA SwitchingTransformers, Bells and Socket Outlets


Socket outlets

More information


Hinged lid for simple application

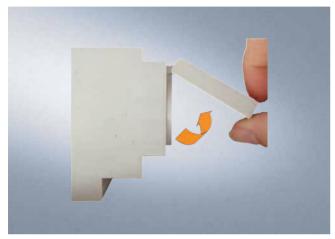

The hinged lid can be opened at an angle greater than 180 $^{\circ}.$

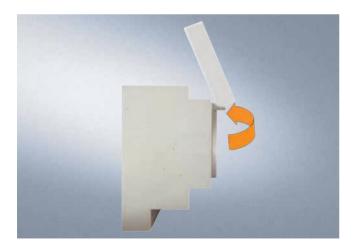

In order to make sure that it is possible to work on the distribution board in the event of a power failure, we recommend that the infeed socket outlet is fed using a short-circuit current proof cable installation and a separate fuse. The yellow socket outlet must be used for this purpose.

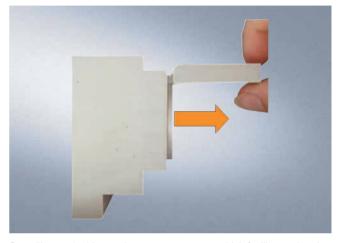

By pulling on the hinges, the covers stay open, which facilitates plugging in. The hinged lids can be retrofitted on all versions.