



INSYS Modem

INSYS Modem 336 4.1
INSYS Modem 56k 4.1
INSYS Modem 56k UL



File E239995

July 06

Copyright © July 06 INSYS MICROELECTRONICS GmbH

Any duplication of this manual is prohibited. All rights on this documentation and the devices are with INSYS MICROELECTRONICS GmbH Regensburg.

Restrictions of guarantee

This handbook contains a concise description. The compilation of the text has been made with the utmost care. Despite all efforts, there may be deviations compared with the actual functions. No guarantee can therefore be given for the accuracy of the contents. We can neither take over a legal responsibility nor any liability for incorrect information and their consequences. Suggestions for improvements and comments are gladly accepted.

Trademarks

The use of a trademark not shown below is not an indication that it is freely available for use.

MNP is a registered trademark of Microcom Inc.

IBM PC, AT, XT are registered trademarks of International Business Machine Corporation.

INSYS ® is a registered trademark of INSYS MICROELECTRONICS GmbH.

Windows™ is a registered trademark of Microsoft Corporation.

Publisher:

INSYS MICROELECTRONICS GmbH

Waffnergasse 8

93047 Regensburg, Germany

Phone: 0941/58692-0

Fax: 0941/563471

E-mail: insys@insys-tec.de

Internet: <http://www.insys-tec.de>

Subject to technical changes as well as correction.

Date: July 06

Item number: 31-22-03.034 english

1	SCOPE OF DELIVERY	7
2	GENERAL	7
3	NOTES REGARDING THE USE OF THE MANUAL	8
4	DESCRIPTION	9
4.1	FRONT PANEL	9
4.2	TOP	9
4.3	BOTTOM	10
4.4	USER PROFILE	10
4.5	CONFIGURATION SOFTWARE HSCOMM	11
4.6	INSTALLATION INSTRUCTIONS	14
5	FUNCTIONS	17
5.1	CONFIGURATION	17
5.2	SERIAL DATA TRANSMISSION	19
5.3	ERROR CORRECTION	23
5.4	DATA COMPRESSION	24
5.5	SELECTIVE CALL ANSWER	26
5.6	SWITCH OUTPUT	27
5.7	ALARM INPUT	28
5.8	SEND MESSAGES	30
5.9	REMOTE CONFIGURATION (REMOTE CONTROL)	32

- 5.10 REMOTE SWITCHING AND REMOTE QUERY VIA DTMF.....34**
- 5.11 ACCESS CONTROL36**
- 5.12 DATA TRANSMIT CONTROLLER (IDLE CONNECTION CONTROL).....38**
- 5.13 PRIORITY CIRCUIT FOR MODEMS WITH PHONES CONNECTED IN SERIES
39**
- 6 OPERATION WITH A PLC.....42**
- 7 FIRMWARE UPDATE43**
- 7.1 FLASHCOM.EXE43**
- 7.2 TERMINAL PROGRAM.....44**
- 8 AT COMMAND SET46**
- 8.1 OVERVIEW AT COMMANDS.....47**
- 8.2 OVERVIEW FAX AND VOICE COMMANDS73**
- 8.3 AT MESSAGES.....73**
- 9 S REGISTRY76**
- 9.1 OVERVIEW S REGISTRY76**
- 9.2 DESCRIPTION S REGISTRY77**
- 10 SENDING OF SMS AS FAX OR E-MAIL86**
- 10.1 SMS AS FAX86**
- 10.2 SMS AS E-MAIL87**
- 11 FAQ.....88**

12	SAFETY INSTRUCTIONS.....	90
12.1	GENERAL.....	90
12.2	SMS.....	90
12.3	CLEANING.....	90
13	TECHNICAL DATA.....	91
13.1	MECHANICAL FEATURES.....	91
13.2	POWER SUPPLY.....	91
13.3	SERIAL INTERFACE.....	92
13.4	POSSIBLE INTERFACE SPEEDS.....	92
13.5	TELEPHONE INTERFACE.....	93
13.6	STANDARDS.....	94
13.7	RESET.....	95
13.8	DIGITAL INPUTS AND OUTPUTS.....	95
13.9	CERTIFICATIONS.....	95
14	COUNTRY CODES.....	96

1 Scope of Delivery

Before you begin with the initial operation, please check if all accessories are included in the box.

- INSYS Modem 336 4.1, INSYS Modem 56k 4.1, or INSYS Modem 56k 4.1 UL
- 2 phone cords (TAE-N at RJ12 and RJ12 at RJ12), not for version UL.
- PC connection cable 9/9-pin (RS232 cable)
- User Guide

In case the content is not complete please contact your supplier. Please also check the modem for shipping damage. Please also refer to your supplier if damage exists.


Please keep the packaging material for possible future dispatch or storage.

2 General

The INSYS Modem 336/56k 4.1 (UL) is suitable for the analogue phone network. It has a very compact design and very robust plastic housing. The modem supports the following functions, which are described in detail in the following:

- Establishing a data connection
- Automatic call
- Alarm inputs and outputs for SMS dispatch and to establish an alarm data connection
- Pulse input to send up to 10 SMS messages
- Fax dispatch at alarm release
- Local or remote configuration
- Usage in 87 countries
- Auto answer
- Data flow control
- Data compression
- Error correction
- Idle connection control
- Flash update
- Security callback

3 Notes Regarding the Use of the Manual

- This manual uses the symbol  for especially important notes. Further notes will be marked accordingly.
- All factory settings are marked “default”.
Example (Chap. 5.7.3): Enter old password (default: QWERTY)
- In Chapters 4 to 6 the description consists of two columns. Individual functions are described on the left side. The according **AT** commands and the modem responses can be found in the right column.

Function description

AT command

Example (Chap. 5.2.7):

After the hardware reset, load the user profile 1

ATZ1

- All **AT** commands start with the letters **AT** and end with a “Return” (Carriage Return - CR). **AT** commands can be entered in capital or small letters. The command is evaluated as soon as the modem received a return.
- In the following, the used syntax is explained:

① ATDT	AT command (font: Courier, bold)
② < Term >	Input of a parameter (font: Courier, bold)
③ [Term]	Input of an optional parameter (font: Courier, bold)
④ <i>Term</i>	Response from the modem (font: italic)

Examples:

① **ATDT<n>**
ATDT1234

Dialing the phone number <n>
Dialing the phone number 1234

②+③ **AT+MS=<Modulation>, [Automode]**
AT+MS=V92
AT+MS=V92,1

Select modulation type
Select modulation type
V.92
Select modulation type
V.92 with automatic
adjustment

④ *Connect*


Connection to the remote terminal has been established.

>

Input prompt during the remote configuration.

4 Description


4.1 Front panel

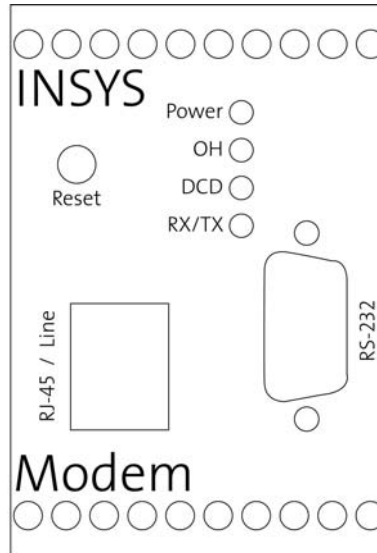

The INSYS Modem 336/56k 4.1 (UL) has four LED's to indicate the operating state.


Name	Color	LED off	LED on
Power	Green	No supply voltage	Supply voltage available
OH (Off Hook)	Yellow	Modem is offline	Modem is hooked to the phone line (online)
DCD (Data Carrier Detect)	Yellow	No connection is established	The connection to the remote terminal is established (Carrier detected)
RX/TX (Receive / Transmit)	Green	No data exchange	Date is exchanged via the modem

4.2 Top

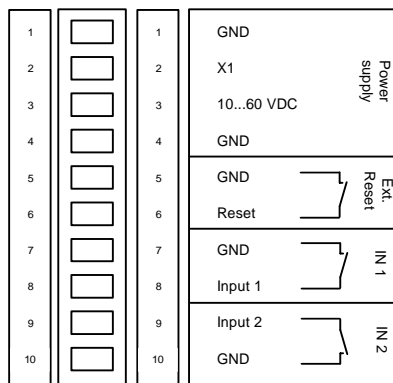

	Terminal	Meaning
1	GND	Ground
2	X1	Reserved
3	10 ... 60VDC	Power supply 10V - 60V DC
4	GND	Ground
5	GND	Ground
6	Reset	Reset input
7	GND	Ground
8	Input 1	Alarm input 1
9	Input 2	Alarm input 2
10	GND	Ground

4.3 Bottom

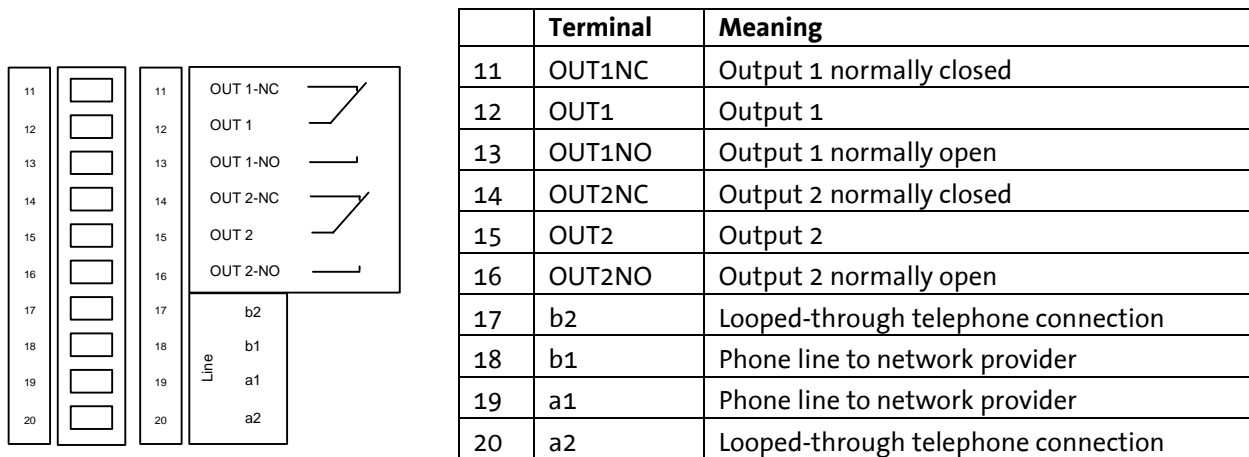

a1 and b1 are the incoming phone lines (e.g. outside line or private branch exchange).

a2 and b2 are used to connect a phone in series. In idle state, they are connected to a1 and b1 via a loop current connector. a2 and b2 are disconnected as soon as the modem occupies the line.

For the INSYS Modem 56k 4.1 UL, the following applies:

Attention!

All devices which are connected to a1, b1, a2 and b2, must comply with the requirements of UL 60950-1, Section 6. The used phone cords must have the type AWG 26.

4.4 User Profile

The modem offers a choice of profiles:

➤ Default factory setting:

The default factory settings enable you to achieve a fixed defined basic state of the modem. Starting with this “basis”, you can customize the modem according to your requirements.

➤ User profiles 0 and 1:

You can save configurations in the user profile, which may be re-used for certain purposes.

A part of the S registry is saved in each profile. In the description, the affected registries are marked with an “*” in the S registry.

4.5 Configuration Software HSComm

The configuration of the modem takes place via **AT** commands which are entered by a terminal program or a control program in the form of character sequences. For a simple set-up, all basic functions of the INSYS modem 336/56k 4.1 (UL) can be entered without knowing the individual commands and their parameters, using the configuration software.

The software can be installed on all common Microsoft Windows operating systems. A terminal window to enter commands directly is available.

4.5.1 HSComm Operation

At the start or via the menu *Device -> Read settings*, HSComm verifies the connected device and displays the device name and the firmware in the program window. By default, only those settings can be selected which are implemented in the identified device.

The buttons in the right column can be used to select the current settings, to reset the device to the saved settings (Reset), or to set the factory settings (default values).

The selected configuration of the parameters is only sent to the modem after you click the button SEND.

File menu: Configurations can be saved as files and re-loaded at a later date.

When an error occurs while transmitting a configuration to the modem, these are displayed in the *Error* menu.

Hitting the key **F1** will automatically display a help window regarding the currently selected topic.

4.5.2 Initial operation using HSComm


4.5.2.1 Serial interface

Control/PC and the modem must be modulated via the following joint settings of the serial interface:

- Baud rate (Data transmission speed)
- Format (Start bit, data bits, parity, stop bits)
- Data flow control (Hardware/software handshake)

PC Settings

Serial interface settings of the PC (*Interface* menu) – the current settings are displayed in the message bar of the main window.

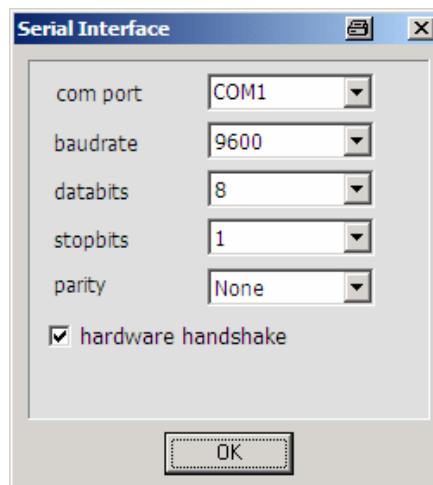


This setting must also be entered at the application (e.g. SPS), which is later connected to the INSYS modem 336/56k 4.1 (UL).

Settings at the INSYS modem 336/56k 4.1 (UL)

Handshake setting at the modem (*Configure menu* → *Modem*):

Auto bauding: With the first AT command, the INSYS Modem 336/56k 4.1 (UL) recognizes the baud rate and the format of the incoming data and configures itself accordingly. When the modem doesn't receive AT commands but user data right away, the last saved settings are kept.

If more data is available than what can be received by the modem, the handshake will regulate the data flow.

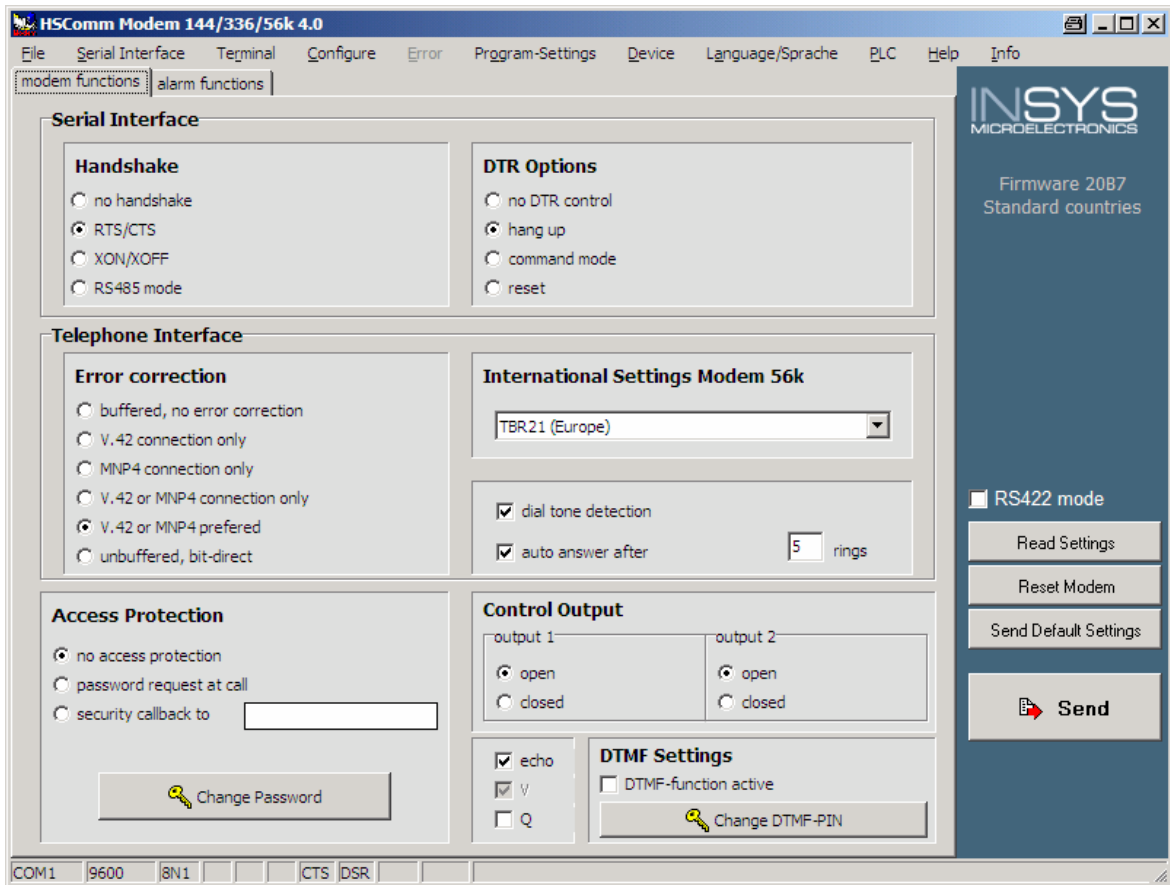

DTR Behavior

The signal *Data Terminal Ready (DTR)* on the serial interfaces indicates that the connected device (control, PC) is switched on, connected and ready for operation. The INSYS Modem 336/56k 4.1 (UL) may react to the device being switched off or the cable being removed.

Echo

With the setting *Echo* the modem sends each command back via the serial interface. During terminal operation, this makes it obvious which commands are entered.

4.6 Installation Instructions

Note: For the installation of the INSYS modem with the configuration software HSComm, please also read Chapter 4.5.




Important Safety Instructions

When using the communication device and its accessories, the following safety instructions must be observed at all times to prevent fire, electric shock or personal injury.


1. The device may not be used in wet environments, damp rooms or close to water, e.g. close to bath tubs, wash basins, sinks, wet floors or swimming pools.
2. The device should not be used during a thunderstorm, as this could result in electrical shock.
3. The device may not be used when smell of gas or gas leakage is apparent, to prevent fire hazards or an explosion.

Please comply with these instructions!

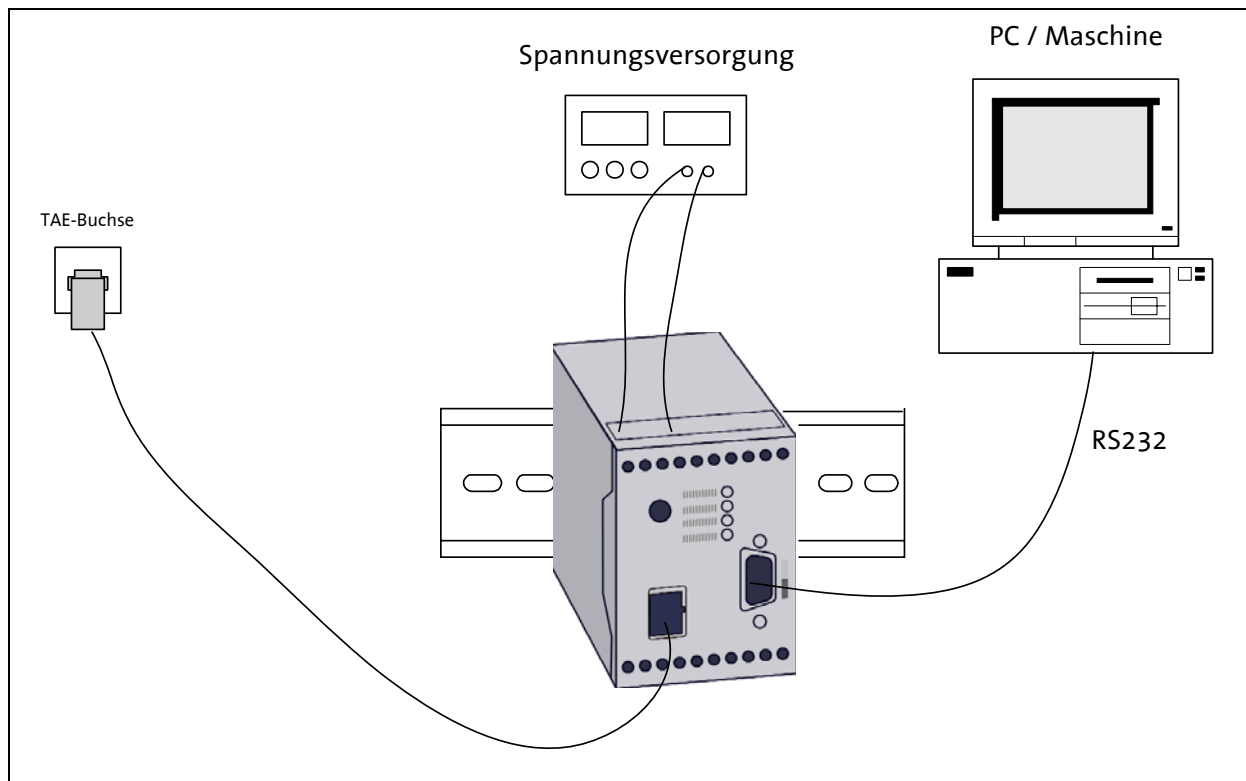

 **Please observe our safety instructions.** 

1. **Mounting on DIN rail**
2. **Connecting the power supply**
 - a) Connecting the ground connection
 - b) Connecting the power supply 10..60V DC

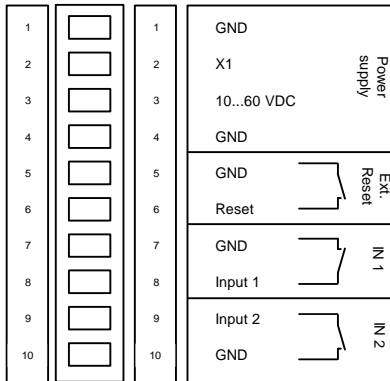

**Note: The minimum value is 10V DC.
The maximum value is 60V DC.**

3. **Switch on power supply**
4. **Connection with the PC**
Connect the 9-pin jack at the modem with the serial interface of your computer.
5. **Driver Installation**
If you use a terminal program or the HSComm program, the installation of a driver is not necessary. If you use another application, a driver may be necessary. Please find our current drivers at <http://www.insys-tec.de/> or install the standard modem 336 under Windows.
6. **Communication with the Modem**
Now, start your communication program on the PC and set it to the used COM interface. The modem will automatically adjust to the baud rate of your PC.
7. **Communication Control via a Terminal Program**
Perform a short test using your terminal program. (TeraTermPro, ProcommPlus).

*Power-LED
lights up*

Open the terminal program and enter the command.

AT *Enter*

When the message appears on your monitor, the device has been successfully installed.

LED RXTX

leuchtet kurz

OK

8. Check the communication using the configuration program HSComm

Open the installed HSComm. The configuration program will automatically search for the connected modem.

9. Connection to the telephone network

Connect the phone outlet and the modem with the supplied phone cord.

10. Connection Test

Establish a connection, either to another modem or, in this example, to Freenet.

Dial the following number: **0101901929**

ATDT 0101901929



For PBXs that require a code number to establish a connection - usually "0" - a different command must be used.

ATX3DT 0,0101901929

The modem will establish a connection.

LED OH lights up

Connect...

5 Functions

This chapter describes the functions and settings of the INSYS Modem 336/56k 4.1 (UL). The settings can be selected and changed via AT commands, using any terminal program (Hyperterminal, TeraTerm, etc.)

Alternatively, all common settings can also be comfortably performed via the configuration software HSComm (see Chapter 4.5 "Configuration software HSComm"). Usually, you will find a part of the configuration software with the according settings in the respective chapter.

5.1 Configuration

5.1.1 Changing the configuration via AT commands

Loading the factory settings into the active profile will enable you to easily recover an executable state.

AT&F

Loading the user profile 0

ATZ0

ATZ

Loading the user profile 1

ATZ1

Note: Prior to the loading of the user profile, a reset is performed.

The settings of all profiles can be displayed in an overview.

AT&V

Example:

The active profile will show all settings currently used by the modem.

ACTIVE PROFILE:

```
B3 E1 L1 M1 Q0 T V1 W0 X4 *A1 *L0 *M0 *P0 *R1 *Y0,0 *Y1,0
%B0 %C3 %E2 %S0
```

```
\A1 \D0 \N3 \V0 &A0 &C1 &D2 &G0 &K3 &Q5 &R1 &S0 &X0 &Y0
```

```
S00:005 S01:000 S02:043 S03:013 S04:010 S05:008 S06:003
S07:050 S08:002 S09:006
```

```
S10:014 S11:085 S12:050 S13:003 S15:000 S17:042 S18:000
S24:000 S25:005 S26:001
```

```
S36:135 S38:020 S46:138 S48:007 S95:000
```

Our example currently shows the settings from user profile 0.

User profile 0:

STORED PROFILE 0:

B3 E1 L1 M1 Q0 T V1 W0 X3 *A1 *L0 *M0 *P0 *R1 *Y0,0 *Y1,0
%B0 %C3 %E2 %S0

\A1 \D0 \N3 \V1 &A0 &C1 &D2 &G0 &K3 &Q5 &R1 &S0 &X0

S00:005 S02:043 S06:003 S07:050 S08:002 S09:006 S10:014
S11:085 S12:050 S13:003

S15:000 S17:042 S18:000 S24:000 S36:135 S40:104 S41:195
S46:138 S95:000

User profile 1:

STORED PROFILE 1:

B3 E1 L1 M1 Q0 T V1 W0 X4 *A1 *L0 *M0 *P0 *R1 *Y0,0 *Y1,0
%B0 %C3 %E2 %S0

\A1 \D0 \N3 \V0 &A0 &C1 &D2 &G0 &K3 &Q5 &R1 &S0 &X0

S00:005 S02:043 S06:003 S07:050 S08:002 S09:006 S10:014
S11:085 S12:050 S13:003

S15:000 S17:042 S18:000 S24:000 S36:135 S40:104 S41:195
S46:138 S95:000

Note: The user profiles 0 and 1 can be modified without affecting the active profile.

Storage location for the phone numbers:

TELEFONNUMMERN:

0= <Z0> 1= <Z1>

2= <Z2> 3= <Z3>

5.1.2 Save Configuration

If the modem configuration was adjusted to certain user requirements, these settings can be saved in the user profiles 0

AT&W0

AT&W

or 1.

AT&W1

Configuration changes will be lost after a RESET or restart if they were not saved before.

5.2 Serial Data Transmission

5.2.1 Automatic Baud Rate Detection

For each received **AT** command, the modem automatically performs an adjustment to the set baud rate, the number of data and stop bits, and the parity. The adjustment to the transmission speed on the phone line is performed automatically, unless the settings say otherwise. During the establishing of a connection both modems attempt to achieve the joint fastest speed on the phone line.

For an existing connection, the modem must first switch to command mode.

+++

You will receive the transmission settings ...

AT+MS?

E.g.: *+MS: V92,1,300,48000,300,56000*

This means that a connection between 300 and 56000 bps was established, preferably according to V.92, depending on the line quality and the abilities of the remote terminal.

Query the quality of an existing connection

AT%Q

Query the level of an existing connection

AT%L

Display the connection statistics after the connection is terminated

AT&V1

5.2.2 Data Buffer for Serial Data Transmission

The modem has a fast send and receive cache (so-called buffer) to adjust the modem to the operating speed of the application. It is, however, possible to deactivate this data buffering and switch to bit direct mode.

When working with buffers, handshake is recommended to avoid transmission errors.

5.2.3 Bit direct mode




Only for special, non-standard data formats

In bit direct mode, the modem has no influence on the transmission format. Data is transmitted without buffering.

Data compression or error correction will not work in bit direct mode. Only the abort sequence - default +++ - is utilized by the modem.


AT\N1

Configuration with HSComm:

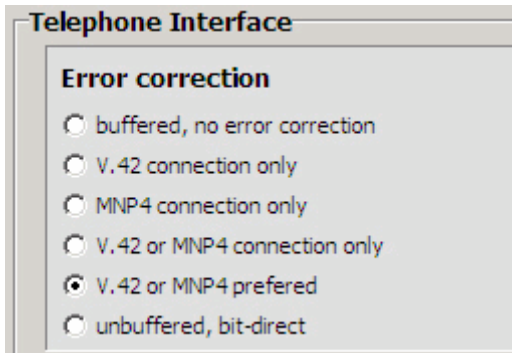

5.2.4 Hardware Data Flow Control with RTS/CTS

Hardware Data Flow Control with the Modem (CTS).

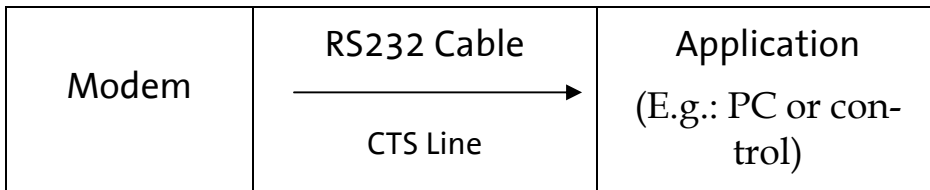


When the input buffer of the modem exceeds a certain fill state, the modem will set the CTS line to OFF. This indicates to the application not to send any data.

AT&K3

AT&R1

After the modem has operated the input buffer so far that the XON buffer falls below a certain fill state, it switches the CTS line back ON and reports to the application that it is ready to receive data again.

5.2.5 Hardware data flow control with the application (RTS)

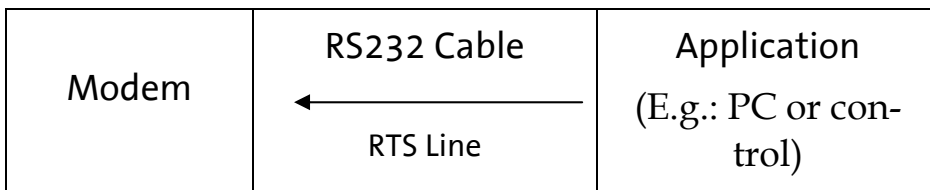

The application sets the RTS line to OFF to request from the modem to interrupt the data transmission.


It will depend on the according application software if the RTS/CTS lines can be operated.

AT&K


AT&R

The application sets the RTS line to ON to request data from the modem.

Configuration with HSComm (settings according to the requirements):

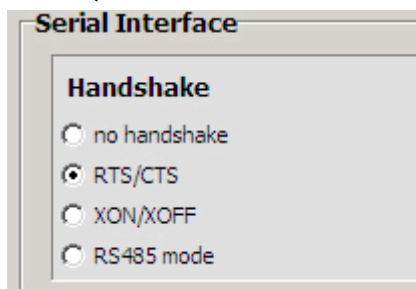

5.2.6 Software data flow control XON and XOFF

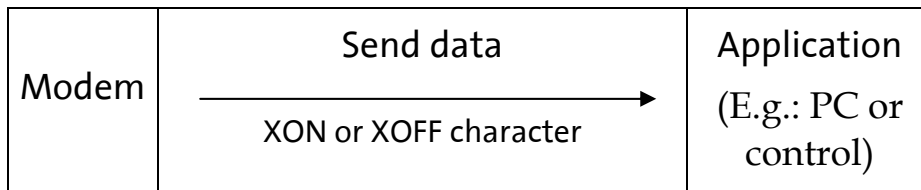

When the input buffer of the modem exceeds a certain fill state, the modem will insert an XOFF character into the data stream to the application. This character will cause the application to send no more data.

It will depend on the according application software if the RTS/CTS data flow control is supported. **AT&K4**

After the modem has processed the input buffer so far, it will insert a XON character into the data stream. This character will cause the application to send data to the modem again. Analogously, the application can control the data stream from the modem to the application.

The XON/XOFF method is only available when the transmitted data do not contain the characters XON or XOFF, which usually appear only in actual ASCII texts (7 bit). When binary data (programs, ...) are transmitted, or in the XMODEM transmission protocol, for example, occasionally appearing XON or XOFF characters would disturb the operation.

5.2.7 Reset

There are four reset options:

- A reset is performed after the power supply has been interrupted for a short time.
- After the key RESET on the front panel of the modem is pressed
- After the terminal RESET is connected to the terminal GND
- With the help of the terminal program

After the hardware reset, load the user profile 0 **ATZ0** **ATZ**

After the hardware reset, load the user profile 1 **ATZ1**

5.2.8 Dial-up delay

The standard TBR21 applies to all public phone networks in EU countries (Belgium, Denmark, German, Finland, France, Greece, Great Britain, Ireland, Italy, Luxembourg, Netherlands, Austria, Portugal, Sweden, Spain), as well as in Switzerland, Liechtenstein, Norway and Iceland.

According to the TBR 21 regulations, after 12 futile dial-up attempts each further dial-up is locked within 2 hours. In this case, the modem must be temporarily switched off.


The counter is automatically reset after each successfully established connection.

After the connection has been established, a dial delay of 5 seconds is observed.

5.3 Error Correction

The modem masters the V.42 error correction protocol including the Microcom Networking Protocol Levels 2/3/4 (MNP2, MNP3, MNP4) and the data throughput optimization MNP10.

Configuration with HSComm
(settings according to the requirements):

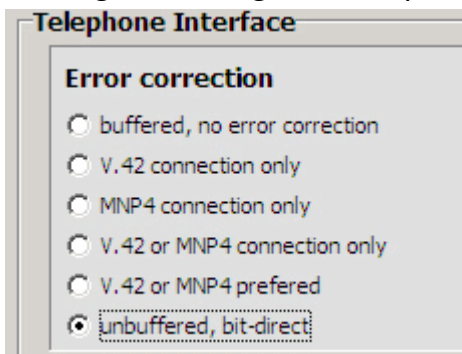

5.3.1 V42 Error correction

The V.42 error correction includes the protocols LAPM (Link Access Procedure for Modem) and MNP 4. LAPM is the preferred error correction.

AT\N<n>

MNP 4 is supported for compatibility reasons with other MNP modems. Both methods determine frames to transfer net data and use CRC (Cyclic Redundancy Check) check sums for error tests.

In V.42, the possibility exists to have the modem identify if the partner is a V.42 modem, a MNP modem, or a modem without error correction. The modem can then autonomously adjust to the partner.

5.3.2 MNP 2/3/4 error correction

The MNP error correction can either be set automatically or activated via **AT** commands.

AT\N<n>

The maximum block size can be set to either

64 byte

128 byte

192 byte

and 256 byte.

AT\A0

AT\A1

AT\A2

AT\A3

5.4 Data Compression

AT%Cn

The modem will identify the type of data compression used by the other modem, or it is fixed on a certain type or no data compression.

Data compression is only available for error corrected connections.

To be able to use data compression, both sides (sender and recipient) must be able to recognize the same data compression mode.

5.4.1 V.42bis data compression

Switch on V.42bis data compression. **AT%C3**

Switch off V.42bis data compression **AT%C0**

V.42bis data compression may only be performed for a V.42 connection (LAP-M or MNP 4). First of all, V.42bis generates a so-called dictionary for the data compression, which contains frequently used character sequences. After that, only short references to these character sequences and not the complete character sequences are transmitted to the other modem. V.42bis cannot re-pack packed data.

AT%C2
AT%C3

5.4.2 MNP 5 data compression

The modem masters the Microcom Networking Protocol Level 5. MNP 5 data compression can only be performed for an error corrected MNP 4 connection. MNP 5 replaces frequently used characters by shorter characters, so-called tokens. MNP 5 cannot re-pack packed data.

AT%C1
AT%C3

5.4.3 V.44 data compression

The V44 data compression offers better compression of typical internet content than V.42bis. V.44 also requires an error corrected connected, just as V.42bis, and cannot re-compress already compressed data.

Switch off V.44 data compression: **AT+DS44=0**

Switch on V.44 data compression: **AT+DS44=3**

5.5 Selective Call Answer



Not for INSYS Modem LL.

If the selective call acceptance is activated, the modem will only accept calls from certain callers. The identification of permitted callers takes places via the caller ID transmission (CLIP). This must, however, be supported by the phone system or the exchange connection, where the modem is connected to.

Activate the selective call acceptance

AT&A1

Deactivate the selective call acceptance

AT&A0

Display a complete list of saved phone numbers for the selective call answer.

AT*N?

Delete the complete phone list for the selective call acceptance.

AT*N99=

The list of phone numbers has 8 storage locations altogether (N0 to N7). Only if the transmitted phone number **<nr>** matches a phone number that was entered in the list will the modem accept the call according to the settings.

AT*N<n>=<nr>

E.g.: Store phone number 1234 at storage location 6.

AT*N6=1234

The memory **N<n>** accepts all phone numbers ending in **<n1>**.

AT*N<n>=<n1>

Our first example activates all phone numbers ending in 941586920.

AT*N7=941586920

The following phone numbers are activated:
0941586920, 0049941586920, and +49941586920.

Our second example activates all phone numbers ending in 0941586920.

AT*N7=0941586920

Only the phone number 0941586920 is activated.

The list of phone numbers may also contain wildcards “*”. This allows the activation of entire blocks of phone numbers. The wild card character (“*”) replaces exactly 1 character of the phone number.

AT*N<n>=94158692**

Our example will activate all phone numbers that start with 94158692** and have 2 more digits (e.g.: an extension).

AT*N6=94158692**



The phone number may not contain separators such as brackets or space characters.

The phone numbers can be deleted individually in two different ways.

- Delete the entered phone number
E.g.: Delete the number stored at the storage location 5
- Overwrite the storage location with a new phone number.
E.g.: Storage location 5 with phone number 456.

**AT*N<n>=
AT*N5=**

**AT*N<n>=456
AT*N5=456**

Display the last phone number whose call was rejected. This phone number is not saved in the power fail-safe memory of the modem, i.e. after a restart of the modem the display will be empty.

AT%N

5.6 Switch Output



Not for INSYS Modem LL.


The INSYS Modem 336/56k 4.1 (UL) has two switch outputs OUT1 and OUT2 at the bottom of the cover, which are designed as potential-free relay switches. They can be controlled individually via software commands. OUT1 is automatically closed during the processing of a pulse alarm.

	Open	Closed
Out 1	AT*Y0,0	AT*Y0,1
Out 2	AT*Y1,0	AT*Y1,1


The switch outputs can be remote-controlled:

- Via a data connection (see Chap. 5.9)
- Via DTMF tones (see Chap. 0)

AT*Yx,y


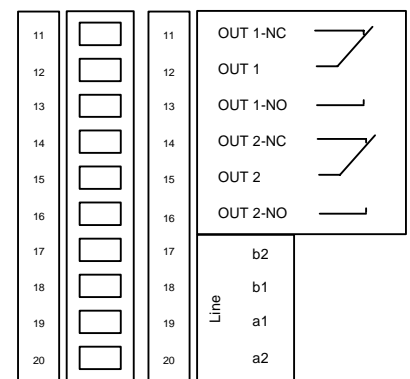


Configuration with HSComm:

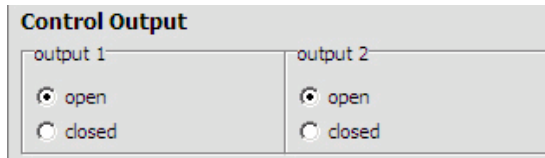

5.7 Alarm Input

(Not for the leased line version)

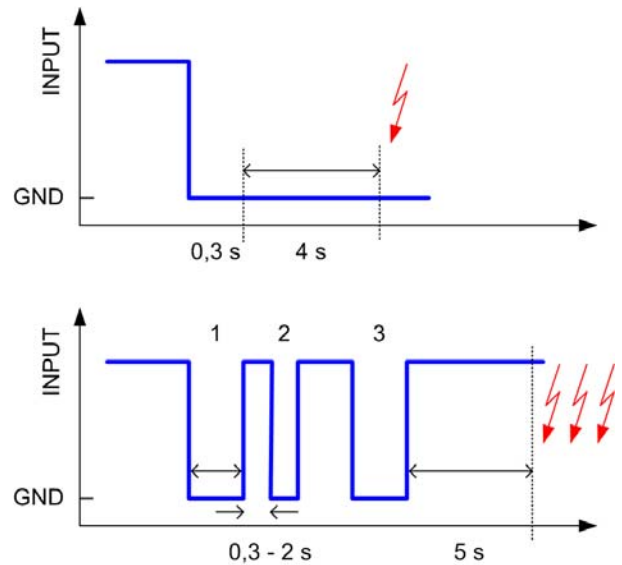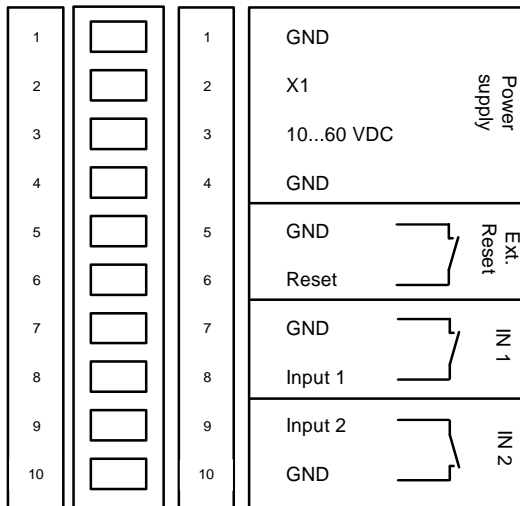

The INSYS Modem has two digital inputs which are activated by connecting them to ground (at least 4 seconds). When an alarm occurs, the INSYS modem can send a message either via a data connection, a fax or an SMS. The simple activation of INPUT2 acts as 2 pulses at INPUT1.

If the pulse input (INPUT1) is activated, the INSYS modem can distinguish between 10 pulse sequences. Each of these 10 alarm events is allocated an alarm message and a recipient.


The length of a pulse or the pause respectively can have a duration between 0.3 and 2 seconds. The entire pulse processing takes place after a pause of 5 seconds.

For control purposes, simple and pulse alarms may be triggered via **AT** commands.

The status of the alarm inputs can be queried by **AT** commands or via DTMF tones.

- Response for inactive alarm input 1
- Response for active alarm input 0


Configuration with HSComm:

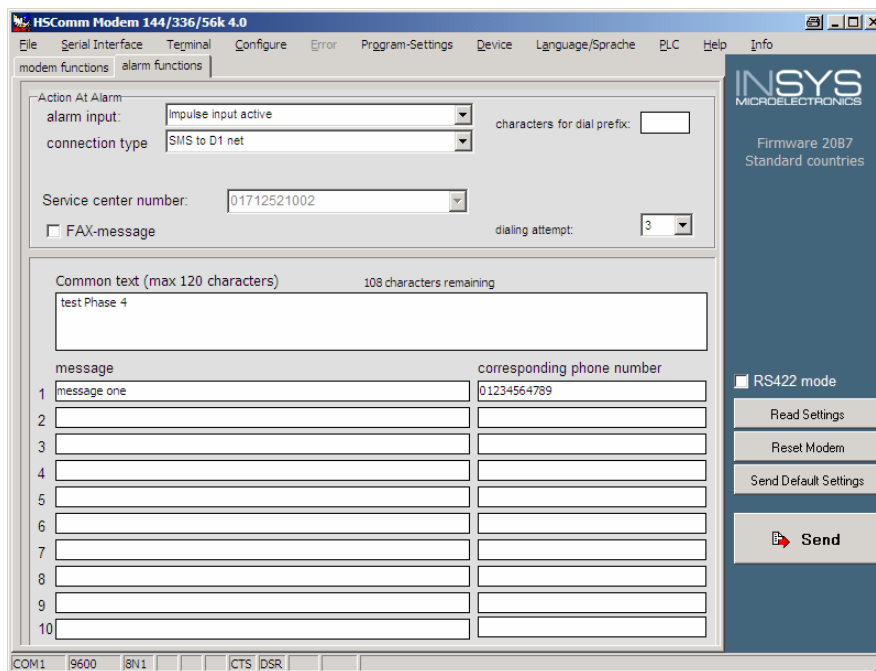

5.8 Send Messages



Not for INSYS Modem LL.

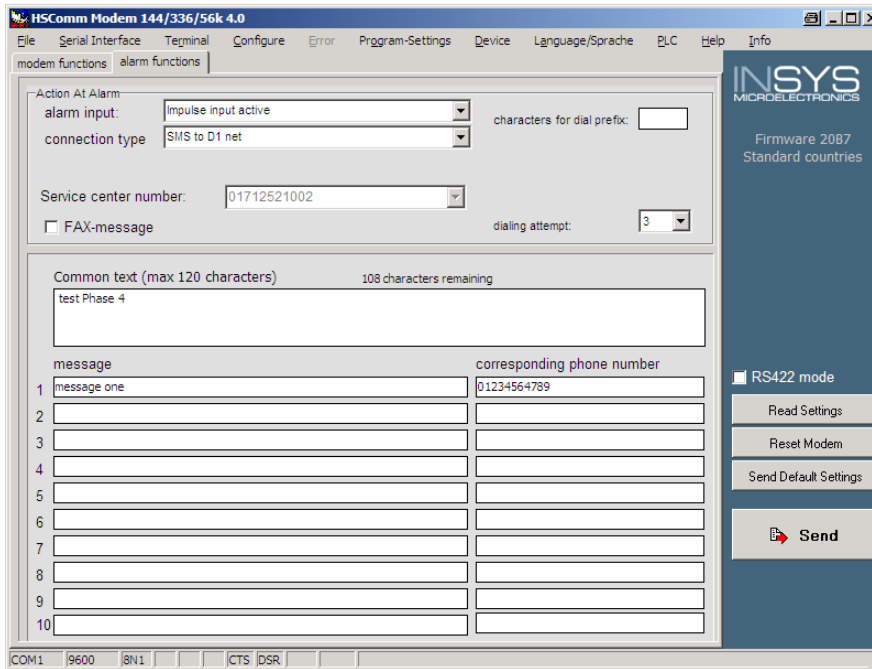

Note: The sending time of an SMS from the sender to a recipient depends on the pertinent provider of the service number. Depending on the degree of utilization and the time of day, an SMS may be on the way for an extended period.

5.8.1 Transmission Configuration

The modem can not only send the alarm message to another analogue modem, but also to a mobile phone as an SMS. Currently GSM900 and GSM1800, and SMS to fixed networks, fax and e-mail.

The maximum text length is 160 characters.

Protocol settings – see table -

AT*M<n>

Transmission	Protocol	Data format	Example
Data Connection			
SMS to Mobile	PET	8N1	D1 or E Network
SMS to Mobile	UCP	7E1	
SMS to Mobile	PET	7E1	
SMS to Mobile	UCP	8N1	D2 network
Fax			

AT*M0

AT*M1

AT*M2

AT*M3

AT*M4

AT*M5

SMS to Mobile or Fixed Network			
-----------------------------------	--	--	--

AT*M6

Enter the service number of the network provider to send SMS, or the phone number for fax and data connections

AT&Z0=<phonenumber>

Definition of the variable alarm texts and phone number for the SMS dispatch. After this command is activated, the modem will query the alarm text.

AT*V1=<text>**AT*V2=<text>**

The modem will reply with

new text:

and expects the input of the phone number and the alarm text in the form

<phonenumber , Text>

Some network providers support SMS forwarding to a fax machine or an e-mail address.

All necessary information is available from the customer service of the provider.

Please find an overview of the required settings for network providers in German-speaking countries in Chapter 11.

5.8.2 Triggering

Manual triggering of the alarm messages 1 or 2 via the **AT** command.

AT%A<n>

For the transmission, all in all, 3 attempts (factory default) are made. The values (1...12) can be changed with the S registry S13.

ATS13=<n>

When the alarm is triggered via SMS, the modem will return a status:

- Message was successfully sent
- Error during the message transmission

*OK**ERROR*

After the message was sent, the connection is terminated.


5.8.3 Fax logging

All alarm messages can also be sent to a fax number for logging reasons.

AT&Z3=<Rufnummer>

5.9 Remote Configuration (Remote Control)

5.9.1 Mode of operation

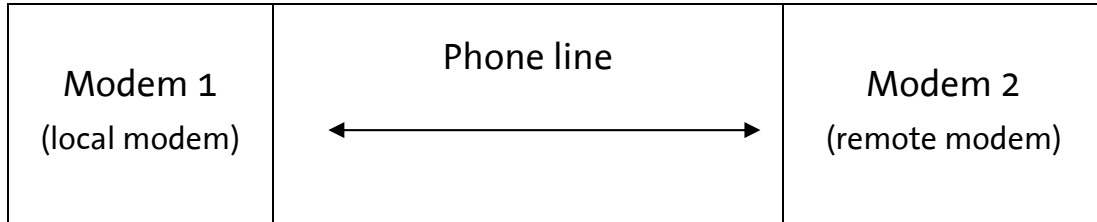

To switch into the remote configuration mode, a data connection must be established between the modems. A particular connection type is not mandatory. However, we recommend using only error-corrected connections for the remote configuration, to avoid transfer errors for the commands.

The local modem is not required to master any remote configuration type.

5.9.2 Remote modem preparation

Auto answer	ATS0=2	
Deactivate security callback	AT&Z1=	
Release modem for remote configuration	AT*R1	
Save entry	AT&W0	AT&W1

5.9.3 Change default password at remote modem

Change password	AT*C
	<i>OLD PASSWORD</i>
Enter old password	QWERTY
Enter new password	<i>NEW PASSWORD</i>
Re-enter new password	<i>Confirm</i>

5.9.4 Start of the remote configuration at the local modem

Dial the remote modem, e.g. an INSYS modem	ATD <Phonenumber>
The modem will establish a successful connection	<i>Connect...</i>
Switch to the mode "Remote Configuration"	****
Prompt for entering the password	<i>Remote Access Remote Password:</i>
Enter password (default)	QWERTY
If the entry was successful, the remote modem will send the input prompt	>

5.9.5 Reduced command set

Some commands may not be executed during remote configuration	ATA	ATD
	ATO	AT/B
	AT&F	
and will result in a response	<i>ERROR</i>	

5.9.6 Terminate the remote configuration process

Before you complete the remote configuration, save all settings in the profiles 0 or 1.	AT&W0	AT&W1
Several commands may be used for termination.		
Return to online mode without software reset	AT*E	AT*X
Software reset with interruption of all connections <i>The modem loads the user configuration 0 or 1.</i>	ATZ0	ATZ1

5.10 Remote Switching and Remote Query via DTMF



Not for INSYS Modem LL.

In phone networks, DTMF is used to dial a remote terminal. To enable switching centers to distinguish between voice and DTMF digits, these digits are created from two unique frequencies, which cannot be created by people in this form. These tones are created with the keys of fixed network and mobile phones.

With the help of DTMF (Dual Tone Multiple Frequency), the status of inputs and outputs can be queried.

5.10.1 Preparation

Activate DTMF mode **AT\D1**

Deactivate DTMF mode **AT\D0**

Save settings (optional) AT&W
AT&W1

After the activation the modem is set into receive mode for incoming calls.

At the start of the DTMF mode connection, the PIN number is prompted. The default setting is "0000". AT*C1

The PIN consists of 4 digits and may be changed any way. The change is immediately stored in the permanent memory. First, the previous PIN must be entered, then the new PIN. Afterwards, the new PIN must be entered once more for confirmation.

OLD PIN
1234
NEW PIN
4567
Confirm
4567

5.10.2 Operation

After the message "OK" (short low tone – short pause – short high tone), the modem expects the input of the PIN.

If the modem recognizes the dial tone of a modem that wants to establish a connection, it will immediately switch to data mode.

After the PIN was entered, the caller will receive a response or a confirmation of his/her action:

"OK" short low tone – short pause – short high tone
 (command executed)
"ERROR" long low tone (invalid command)

The following commands can be performed via the phone keys:

Key	Meaning
0*	<u>Terminate connection.</u>
1*x	<u>Control switch output 1:</u> x: 1 Set switch output 1 0 Reset switch output 1 Return: "OK"
2*x	<u>Control switch output 2:</u> x: 1 Set switch output 2 0 Reset switch output 2 Return: "OK"
3*	<u>Query of the two alarm inputs:</u> Both alarm inputs are output in succession. After the "OK", for each alarm input state a tone will occur. If the alarm input is set to "HIGH", a high long tone is output, and for the LOW state a low long tone. HIGH high long tone LOW low long tone

Note: **If nothing is entered for more than 25 seconds, the modem will automatically disconnect.**

5.11 Access Control

 **Not for INSYS Modem LL.**

5.11.1 Password

To protect you from unauthorized access via the phone line, the modem may be protected by a password. This password is used to establish a data connection, as well as for security callback and remote configuration

The default setting is **QWERTY**.

AT*C

OLD PASSWORD

QWERTY

NEW PASSWORD

Confirm

5.11.2 Data Connection

An incoming connection is only released after the caller has entered the password.


Activate password protection

AT*P1

Deactivate password protection

AT*P0

Configuration with HSComm:

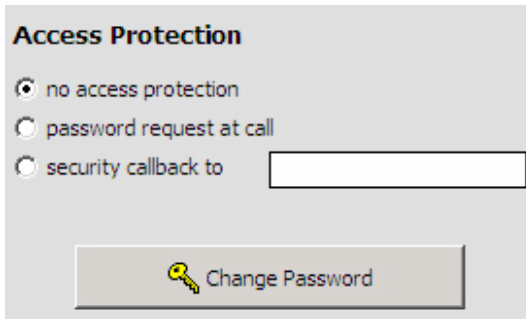

5.11.3 Security callback

The feature Security Callback will cause the remote modem to hang up and call back a preset number.

This function will only be performed after a password has been entered and is therefore a safe protection against unauthorized access.

5.11.3.1 Preparation

As a preparation, security callback is activated by saving the call back number in the phone number registry of the modem that is calling back.

AT&Z1=<phonenumber>

AT&Z1=

The deactivation takes place by deleting the call back phone number.

5.11.3.2 Operation

Establishing a connection to the remote modem by entering the **AT** command.

ATD <phone number>

The connection to the modem is established.
The modem responds to an incoming call.

Connect
SECURITY CALLBACK
REMOTE PASSWORD:

You must now enter the “Remote Password”, which is identical to the password for the remote configuration.
(default: **QWERTY**)

QWERTY

After the password has been entered correctly, the modem hangs up and after about 10 seconds dials the stored phone number. Altogether, 3 dialing attempts with a pause of 10 seconds between each attempt are performed.

OK

No Carrier

If the entered password was incorrect, the connection is terminated and thus prevents unauthorized access to the connected device.

No Carrier

After that, a normal data connection is established.

Callback in Progress

5.12 Data Transmit Controller (Idle Connection Control)



Not for INSYS Modem LL.

The Data Transmit Control (DTC) is a function integrated in the firmware which monitors the data transmission in online mode. This function prevents the modem to stay online for an unlimited amount of time, although no data is being transmitted anymore.

5.12.1 Activation

The activation takes place in the registry S15, and any time period between 1 and 255 seconds may be set.

ATS15=<n>

5.12.2 Mode of Operation for the “Timer”

The timer will run immediately after the modem goes off-hook. After the set time has been reached, a RESET is performed.

The timer is reset by each byte that is sent via the serial interface.

Note: **The timer will run immediately after the modem goes off-hook. We therefore strongly recommend to not setting any times below 30 seconds.**

In remote mode, idle connection control at the modem must be deactivated to prevent the connection from being interrupted after the timer has run out.

The remote data transmission will not reset the timer.

5.13 Priority Circuit for Modems with Phones Connected in Series



Not for INSYS Modem LL.

The INSYS Modem 336/56k 4.1 (UL) gives a phone connected in series priority, to make sure it interferes as little as possible with the usage of the phone connection.

Command	Function 1 (Chap. 5.13.1)	Function 2 (Chap. 5.13.2)	Function 3 (Chap. 5.13.3)	
AT-STE=0	==	==	==	(default)
AT-STE=1	√	==	==	
AT-STE=2	==	√	==	
AT-STE=3	√	√	==	
AT-STE=4	==	==	√	
AT-STE=5	√	==	√	
AT-STE=6	==	√	√	
AT-STE=7	√	√	√	


5.13.1 Detecting a busy phone Line

During a dial-up attempt, the model detects the busy phone line. The modem reports

LINE IN USE

Changing the loop voltage to detect the function – Detection of a busy line (U1) – can be set with the help of AT commands.

AT-TTE=U1, U2, U3

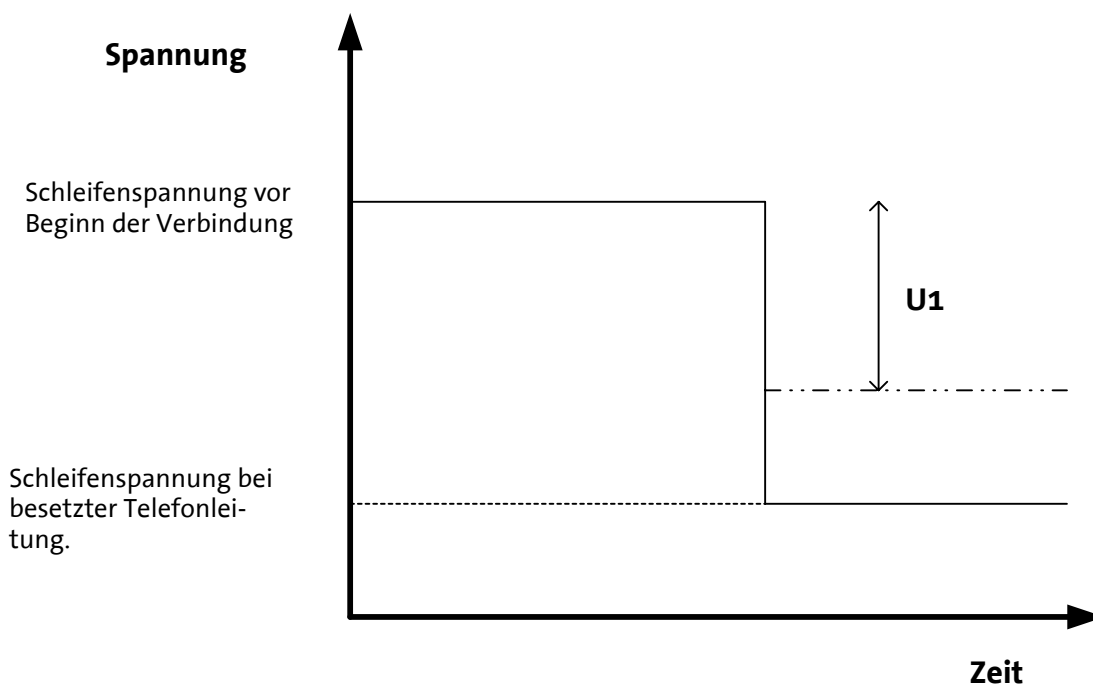

5.13.2 Going off-hook on account of a telephone connected in series

If a telephone connected in series goes off-hook during an existing modem connection, the modem will immediately terminate the connection.

The telephone is connected to the line and receives a dialing tone.


In the registry S86, the value is set to 25.

ATS86=25

When the phone connection is terminated, the modem will not establish a new connection.

Changing the loop voltage to detect the function – Off-hook on account of a telephone connected in series (U2) – can be set with the help of **AT** commands.

AT-TTE=U1 , U2 , U3

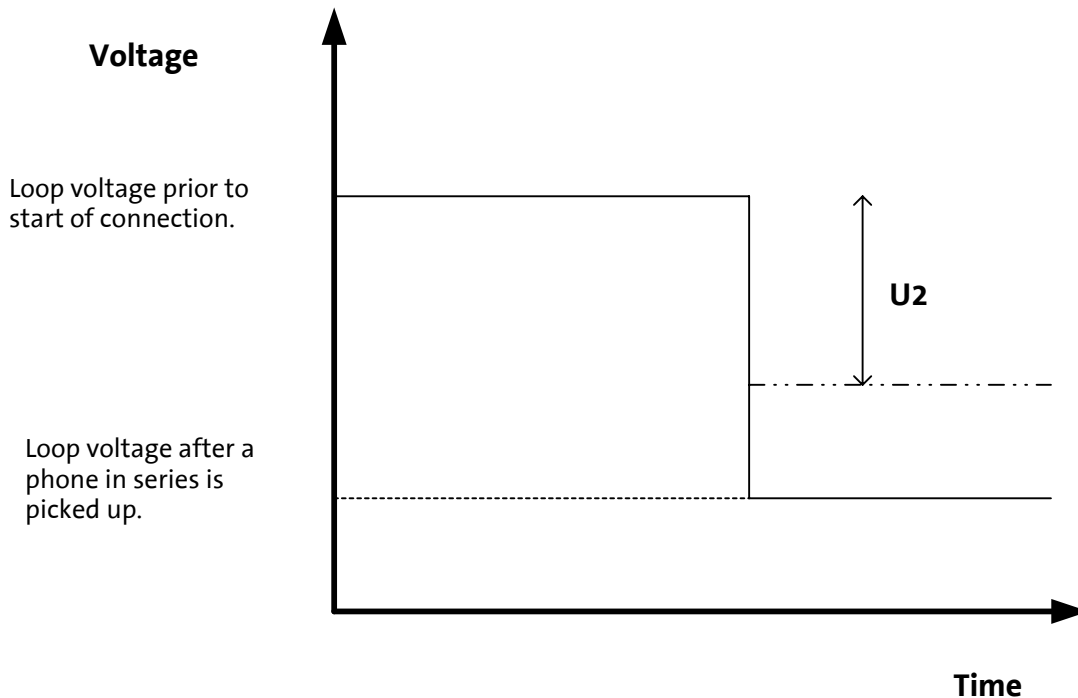

Note: The detection starts immediately after the handset is picked up. To access the exchange, simple analogue phone systems often connect the modem per contact directly with the exchange, which results in a strong change or polarity reversal of the loop voltage. For some analogue phone systems, this may result in an erroneous detection. Off-hook detection is therefore not recommended in connection with analogue phone systems.

5.13.3 Remote Terminal Connection Abort


When the remote terminal aborts a connection, the modem will immediately hang up.

In the registry S86, the value is set to 25.

ATS86=25

Changing the loop voltage to detect the function – Remote Terminal Connection Abort (U3) – can be set with the help of **AT** commands.

AT-TTE=U1 , U2 , U3

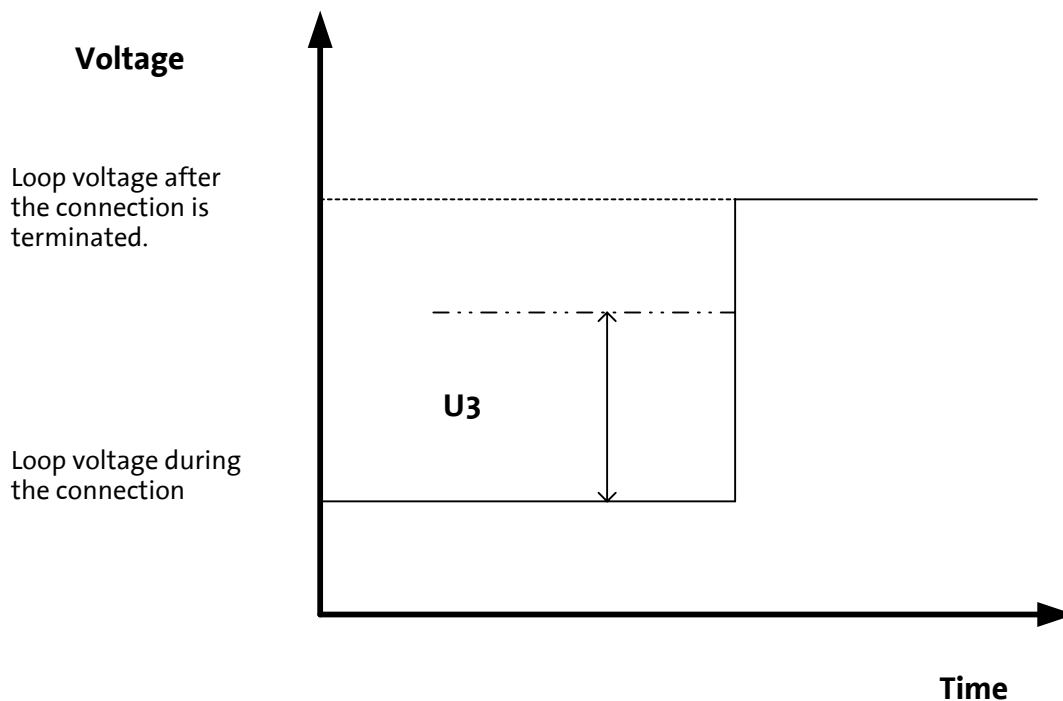


Note: This detection is based on the change of the loop voltage (**AT-TTE=U1 , U2 , U3**). It will not work for all connections. ISDN phone systems in particular often suppress the hang-up noise.

6 Operation with a PLC

 **Not for INSYS Modem LL.**

The INSYS Modem 336/56k 4.1 (UL) has been tested for the most common PLC systems on the market.

The documentation (Application Notes) of the settings required for the respective PLC can be queried at INSYS MICROELECTRONICS (E-mail: insys@insys-tec.de).

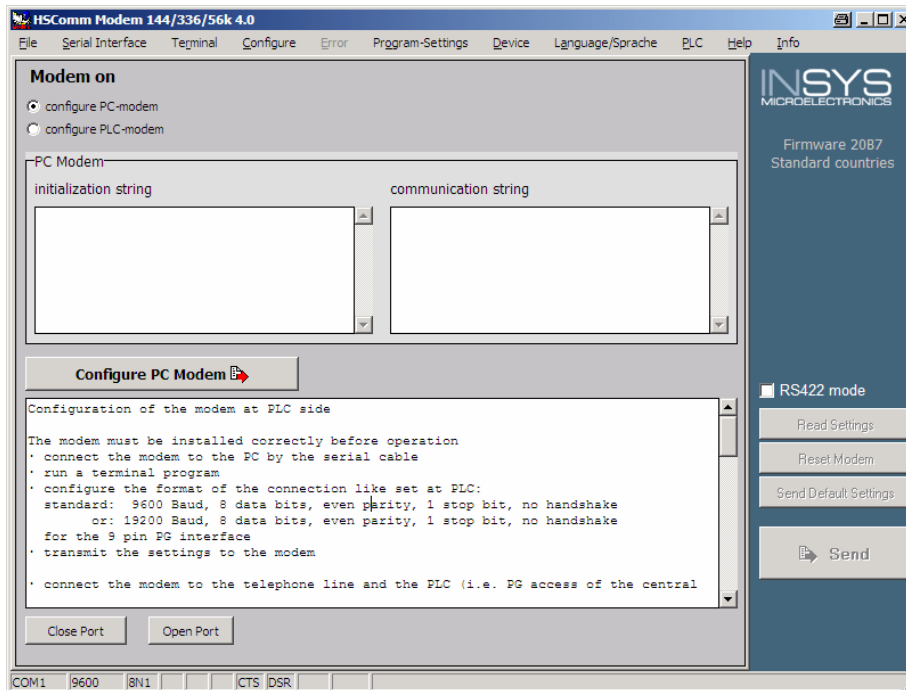

HSComm offers a range of recommended settings for the modems connected at the PLC or the PC at the control center.

If control is selected in the menu *PLC*, for both modem locations the necessary settings and a user prompting are displayed as text. The user can adjust the settings.

The commands *Configure PLC modem* and *Configure PC modem* transmit these settings to the connected modem.

7 Firmware Update


7.1 Flashcom.exe

This function enables the firmware update of the INSYS Modem 336/56k 4.1 (UL) without switching the EEPROM. The new version is available from your service partner.


Query of the used firmware

ATI4


Unpack the file into any directory and start Flashcom.exe.

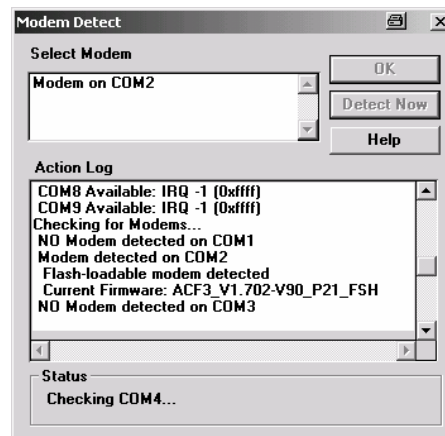


The program will automatically search for the connected modem.

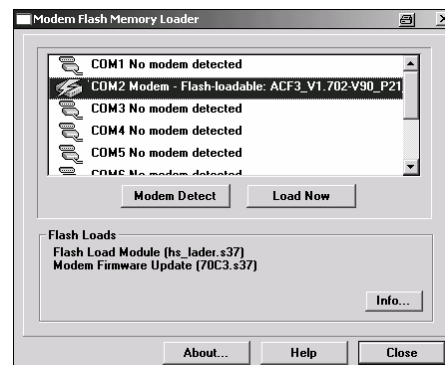

Select the according INSYS Modem and start the update.

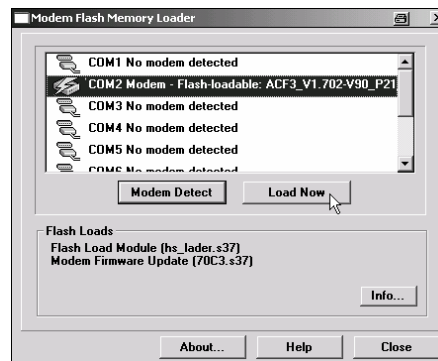

Close the window after the update is completed.

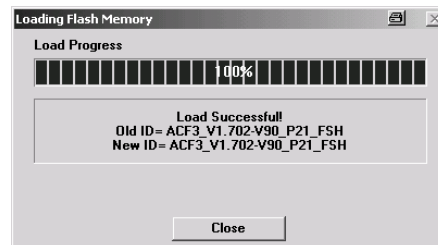

7.2 Terminal Program

As an alternative to the procedure described in the previous chapter, the firmware update may also be performed via a terminal program.

7.2.1 Requirements

For the firmware update you will need a PC and a terminal program. The terminal program must be able to perform an ASCII upload (ASCII data transmission protocol). Setting the hardware flow control is mandatory. For safety, any interpretation of characters (e.g. TAB, CR, BS ...) by the ASCII upload protocol must be prevented.

The baud rate must be between 9,600 baud and 57,600 baud. Setting a different baud rate may lead to errors. The loading procedure takes about 2 to 3 minutes for 57,600 baud; for lower baud rates accordingly longer.

7.2.2 Activation and Process

Start of the flash update

AT**

The modem sends a response

Download initiated...

The update is performed in two steps.

**Transfer file
with the help of
a terminal pro-
gram.**

➤ ASCII upload of the file HS_LADER.S37

Download Flashcode

➤ ASCII upload of the firmware (xxxxxxx.S37)

*Device success-
fully programmed*

Completion of the loading procedure.

The process is finished.


Monitoring of Results:

The transfer process is indicated by dots on the monitor (of the terminal program).

Note: For the terminal program Telix, the delay settings between the character and the lines must be set to "0" for the ASCII protocol.

8 AT Command Set

Most of the INSYS communication devices are controlled internally via **AT** commands. A terminal program is integrated in the HSComm. The **AT** commands can be directly entered at the menu item “Terminal”.



Alternatively, we recommend the terminal program TeraTerm by T. T. Teranishi. The free software can be downloaded at <http://www.vector.co.jp/authors/VA002416/teraterm.html>.

Each **AT** command starts with the letters **AT** and ends with a “Carriage Return” (CR). Capital and small letters will both be accepted, but the leading characters must be either ‘**AT**’ or ‘**at**’. The command line is evaluated after the modem receives a Return command. In the description, a parameter with the letter “**n**” means that it can have various values.

For example, **ATL<n>**, where ‘**n**’ can have the value 0 or 3, e.g. **ATL2** (medium volume). For commands which expect a parameter but don't have a parameter, the modem will automatically assume the parameter 0. The commands **ATZ** and **AT0**, for example, will have the same effect.

The factory settings are marked “(default)”.

The standard end character is “return” (oDh) or “<CR>”. “Return” may not be entered after “*****” or “+++”.



The commands are acknowledged with “OK” or “ERROR”. A command that is being edited will be interrupted by any further incoming character. Therefore, the next command must wait for acknowledgement to avoid the deletion of the current command.

8.1 Overview AT Commands

Command	Description
AT**	<u>Start of the flash load function</u>
ATA	<u>Answer mode</u> The modem is switched into response mode. This is only effective in Germany, if the connected phone goes off-hook or if a call comes in.
A/	<u>Repeat the last command</u> The last command is repeated.
AT\A<n>	<u>Select maximum MNP block size</u> Define maximum block size for error corrected MNP transmissions. AT\A0 64 byte AT\A1 128 byte (default) AT\A2 192 byte AT\A3 256 byte
AT*A<n>	<u>Automatic call acceptance ON/OFF</u> AT*A0 Call acceptance is blocked, irrespective of S0 AT*A1 Call acceptance according to S0 (default) Note: see also S-Registry 36, bit 7
AT&A<n>	<u>Selective Call Answer On or Off</u> To evaluate selective call answer, the phone number must be transmitted (CLIP). The following countries support the "CLIP" function: Australia, Belgium, China, Denmark, Germany, Finland, Great Britain, Hong Kong, India, Ireland, Iceland, Italy, Canada, Korea, New Zealand, The Netherlands, Norway, Austria, Sweden, Singapore, Spain, Taiwan, USA. AT&A1 Switches the selective call answer ON AT&A0 Switches the selective call answer OFF (default) The AT&A setting is saved in AT&W.
AT%A<n>	<u>Send alarm text manually</u> Manual triggering of the message. After the message is sent, the device responds with OK (success) or ERROR (failure). Note: see also AT*V<n>

Command	Description
AT\B<n>	<p><u>Send "break" to the other modem</u></p> <p>For connections that were not error corrected the modem sends a break signal to the other modem. The length of the signal is: the specified parameter times 1/10 of a second. For error corrected connections, the modem sends a break signal according to the active error correction protocol without considering a parameter specification.</p> <p>If no connection is established or if a fax connection is active, an error message is displayed.</p> <p>AT\B1 1/10 second break signal</p> <p>AT\B2 2/10 second break signal</p> <p>AT\B3 3/10 second break signal</p> <p>AT\B4 4/10 second break signal</p> <p>AT\B5 5/10 second break signal</p> <p>AT\B6 6/10 second break signal</p> <p>AT\B7 7/10 second break signal</p> <p>AT\B8 8/10 second break signal</p> <p>AT\B9 9/10 second break signal</p>
AT%B<n>	<p><u>Switch key abort on and off during connection</u></p> <p>AT%B0 Key abort is active. Each character on the TX line will result in an interruption of the connection setup (default)</p> <p>AT%B1 Key abort is deactivated. The connection setup cannot be interrupted manually.</p> <p>A connection setup can only be interrupted via DTR drop, internal canceling of the modem (NO DIALTONE, BUSY) or Timeout (NO CARRIER). (S-Registry 36 Bit 6)</p>
AT%C<n>	<p><u>Enable data compression</u></p> <p>Enable/disable a data compression type</p> <p>The modem can only perform data compression for error corrected connections.</p> <p>AT%C0 No data compression enabled</p> <p>AT%C1 MNP 5 data compression enabled</p> <p>AT%C2 Enable V.42bis and V.44 data compression</p> <p>AT%C3 Enable MNP 5 and V.42bis data compression (default)</p>
AT*C	<p><u>Remote configuration password</u></p> <p>This password secures the remote configuration as well as incoming data connections (see AT*P) and security callback.</p> <p>OLD PASSWORD Requires the old password (default: QWERTY). Wrong input leads to ERROR.</p> <p>NEW PASSWORD Enter the new password with 6 to 12 characters.</p> <p>CONFIRM Repeat the new password. Wrong input leads to ERROR.</p> <p>OK The password is immediately stored in the EEPROM.</p>

Command	Description
AT*C1	<p><u>PIN for remote switching via DTMF</u></p> <p>This PIN secured the functions when the alarm inputs are remotely switched via SMS and for remote query of the alarm inputs.</p> <p>OLD PIN Requires the old PIN (default: 1234). Wrong input leads to ERROR.</p> <p>NEW PIN Enter the new PIN (4 characters)</p> <p>CONFIRM Repeat the new PIN Wrong input leads to ERROR.</p> <p>OK The PIN is immediately stored in the EEPROM.</p>
AT&C<n>	<p><u>DCD (CT109) behavior</u></p> <p>Behavior of the RS232 DCD output of the modem.</p> <p>AT&C0 DCD is always ON</p> <p>AT&C1 DCD follows the carrier signal of the phone line (default)</p>
AT+CMGF=<n>	<p><u>Set the SMS dispatch format with AT+CMGS</u></p> <p>AT+CMGF=0 Sets the PDU mode for the SMS dispatch via AT+CMGS (default).</p> <p>AT+CMGF=1 Sets the text mode for the SMS dispatch via AT+CMGS (default).</p>
AT+CMGS=<n>	<p><u>SMS dispatch directly via AT command</u></p> <p>Depending on the setting of AT+CMGF=<n>, the command AT+CMGS=<n> will have a different syntax.</p> <p>Setting AT+CMGF=1 (text mode): AT+CMGS=<phonenumber></p> <p>The modem returns the ">" character and awaits the SMS text (up to 160 characters), ending with an EOF character (0x1A or STRG-Z).</p> <p>Notes:</p> <ul style="list-style-type: none"> ➤ Depending on the provider, the phone number must be entered in the format "0941xxxx" or "49941xxxx" (see AT*M and/or AT&Z2). ➤ After the sending procedure was successful, the modem returns "+CMGS: 000". <p>Setting AT+CMGF=0 (PDU mode): AT+CMGS=<PDU string length></p> <p>The modem returns the character ">" and awaits the PDU string, ended with an EOF character (0x1A or STGR-Z).</p> <p>Notes:</p> <ul style="list-style-type: none"> ➤ Depending on the provider, the phone number must be entered in the format "0941xxxx" or "49941xxxx" (see AT*M and/or AT&Z2). ➤ "Numbering Plan" is ignored. ➤ The service center is defined by AT&Z0, the SCA field in the PDU string is ignored. ➤ Message header, confirmation SMS and validity period are not supported. ➤ Data coding scheme: Only the "default alphabet" is supported. ➤ After the sending procedure was successful, the modem will return "+CMGS: <MR>", where <MR> is the message reference defined in the PDU string.

Command	Description
AT+CPIN?	<p><u>Dummy command for GSM compatibility</u></p> <p>AT+CPIN? responds with "+CPIN: READY".</p> <p>Note: This command only serves for the purpose of compatibility with applications for GSM devices.</p>
AT+CREG?	<p><u>Dummy command for GSM compatibility</u></p> <p>AT+CREG? responds with "+CREG: 0,1".</p> <p>Note: This command only serves for the purpose of compatibility with applications for GSM devices.</p>
AT+CSQ	<p><u>Dummy command for GSM compatibility</u></p> <p>AT+CSQ responds with "+CSQ: 20.99".</p> <p>Note: This command only serves for the purpose of compatibility with applications for GSM devices.</p>
AT+CPMS?	<p><u>Dummy command for GSM compatibility</u></p> <p>AT+CPMS? responds with "+CPMS: "MT",8,40,"MT",8,40,"MT",8,40".</p> <p>Note: This command only serves for the purpose of compatibility with applications for GSM devices.</p>

Command	Description																
ATD<n>	<p data-bbox="406 232 456 262"><u>Dial</u></p> <p data-bbox="406 277 1442 468">The modem goes off-hook and dials according to the dialing string transmitted via the ATD command. After it dialed, the modem attempts to establish a connection. If the ATD command was performed without a dialing string, the modem goes off-hook and attempts to connect to the other modem (without dialing). The behavior of the modem depends on the activation of the line current recognition (see ATX command).</p> <p data-bbox="406 483 1426 555">The execution of the ATD command also depends on when the last dialing attempt was performed.</p> <p data-bbox="406 571 1449 683">In the mode AT+FCLASS=0, the modem acts like a data modem. It attempts to connect to another data modem. This attempt is repeated until the waiting period that was specified in the S7 registry has expired.</p> <p data-bbox="406 698 1449 770">If this period is exceeded, the modem hangs up and the following error message appears: NO CARRIER.</p> <p data-bbox="406 786 1442 898">In the mode FCLASS=1 or =2, the modem acts as a fax modem. It attempts to connect to another fax or fax modem. (The modem goes into receive status HDLC V.21 channel 2, as if the command AT+FRH had been executed.)</p> <p data-bbox="406 913 1374 985">The following characters may be transmitted as parameters (brackets, punctuation marks, spaces and semicolons are ignored):</p> <table data-bbox="406 1001 1442 1912"> <tr> <td data-bbox="406 1001 502 1030">0 to 9</td> <td data-bbox="587 1001 836 1030">The digits from 0 to 9</td> </tr> <tr> <td data-bbox="406 1046 422 1075">*</td> <td data-bbox="587 1046 979 1075">The asterisk: Only for tone dialing</td> </tr> <tr> <td data-bbox="406 1090 422 1120">#</td> <td data-bbox="587 1090 943 1120">The hash: Only for tone dialing</td> </tr> <tr> <td data-bbox="406 1135 459 1164">A-D</td> <td data-bbox="587 1135 1066 1164">The inband signaling characters A, B, C, D</td> </tr> <tr> <td data-bbox="406 1180 422 1209">P</td> <td data-bbox="587 1180 1442 1261">Pulse dialing mandatory: Pulse or tone dialing is required according to the region.</td> </tr> <tr> <td data-bbox="406 1276 422 1305">T</td> <td data-bbox="587 1276 1442 1357">Tone dialing mandatory: Pulse or tone dialing is required according to the region.</td> </tr> <tr> <td data-bbox="406 1373 422 1402">W</td> <td data-bbox="587 1373 1426 1520">Wait for dialing tone: The modem waits for the dialing tone before it starts to dial. If no dialing tone was detected within the period specified in the S6 registry, the modem hangs up and an error message is displayed.</td> </tr> <tr> <td data-bbox="406 1536 422 1565">@</td> <td data-bbox="587 1536 1442 1912"> <p data-bbox="587 1536 1442 1729">Waiting for silence: The modem waits at least five seconds for silence in the line, before it executes the next character from the parameter string. If this five second silence can not be detected and the abort period in the S7 registry has not been exceeded, the modem terminates the connection displaying the message: NO ANSWER.</p> <p data-bbox="587 1744 1442 1825">If busy signal recognition was activated, the modem terminates the connection displaying the message: BUSY.</p> <p data-bbox="587 1841 1426 1912">If a response tone from the other modem is received during the waiting period, a connection is established.</p> </td> </tr> </table>	0 to 9	The digits from 0 to 9	*	The asterisk: Only for tone dialing	#	The hash: Only for tone dialing	A-D	The inband signaling characters A, B, C, D	P	Pulse dialing mandatory: Pulse or tone dialing is required according to the region.	T	Tone dialing mandatory: Pulse or tone dialing is required according to the region.	W	Wait for dialing tone: The modem waits for the dialing tone before it starts to dial. If no dialing tone was detected within the period specified in the S6 registry, the modem hangs up and an error message is displayed.	@	<p data-bbox="587 1536 1442 1729">Waiting for silence: The modem waits at least five seconds for silence in the line, before it executes the next character from the parameter string. If this five second silence can not be detected and the abort period in the S7 registry has not been exceeded, the modem terminates the connection displaying the message: NO ANSWER.</p> <p data-bbox="587 1744 1442 1825">If busy signal recognition was activated, the modem terminates the connection displaying the message: BUSY.</p> <p data-bbox="587 1841 1426 1912">If a response tone from the other modem is received during the waiting period, a connection is established.</p>
0 to 9	The digits from 0 to 9																
*	The asterisk: Only for tone dialing																
#	The hash: Only for tone dialing																
A-D	The inband signaling characters A, B, C, D																
P	Pulse dialing mandatory: Pulse or tone dialing is required according to the region.																
T	Tone dialing mandatory: Pulse or tone dialing is required according to the region.																
W	Wait for dialing tone: The modem waits for the dialing tone before it starts to dial. If no dialing tone was detected within the period specified in the S6 registry, the modem hangs up and an error message is displayed.																
@	<p data-bbox="587 1536 1442 1729">Waiting for silence: The modem waits at least five seconds for silence in the line, before it executes the next character from the parameter string. If this five second silence can not be detected and the abort period in the S7 registry has not been exceeded, the modem terminates the connection displaying the message: NO ANSWER.</p> <p data-bbox="587 1744 1442 1825">If busy signal recognition was activated, the modem terminates the connection displaying the message: BUSY.</p> <p data-bbox="587 1841 1426 1912">If a response tone from the other modem is received during the waiting period, a connection is established.</p>																

Command	Description
ATD<n> (Continuation)	<p>, Dial tone delay: The modem performs a dial tone delay before it executes the next character of the parameter string. The delay length is defined in the S8 registry.</p> <p>L Last number re-dialing.</p> <p>; Return to the input mode after dialing. It is added to the end of the dialing string and causes the modem to return to the entry mode when it reaches “;” (with: message OK). This enables the input of AT commands even with a receiver off-hook. The additional AT commands can follow in the same input line after the “;” or they can be transmitted to further input lines. The ATH command will abort the connection and the receiver is hung up.</p> <p>S=n Dialing the n-th number from the number pool, which was set up with the AT&Z<n> command.</p> <p>! If the character “!” is a part of the dialing string, the modem will hang up within the time frame determined in S29 and then goes off-hook again.</p> <p>^ Suppresses the sending of a ringing tone.</p> <p>ATD12345; The semicolon (;) causes the return to the input mode after dialing.</p> <p>Default: Ringing tone is sent for fax operation. No ringing tone for data operation.</p> <p>() Are ignored: They are just used as an outline.</p> <p>- Are ignored: They are just used as an outline.</p> <p>,, Space characters are ignored: They are just used as an outline.</p> <p>Examples:</p> <p>ATD12345 Dial the phone number 12345</p> <p>ATDP12345 Dial the phone number 12345 with the pulse dialing method</p> <p>ATDT12345 Dial the phone number 12345 with the tone dialing method</p> <p>ATX3D0W12345</p> <p>For PBXs, which connect to the exchange line using the prefix 0 (or 9): First, blind dialing is activated with :X3 (see “ATX3” command), to be able to dial a leading 0 without hearing a dialing tone. After 0 has been dialed via: D0, dialing tone recognition can be switched on again using the parameter: W. The modem thus waits for the dialing tone and continues with the rest of the dial-up (via :12345) only after hearing the dialing tone. Waiting for the dialing tone may be omitted. In this case, the dialing command is ATX3D012345.</p>

Command	Description																										
AT&D<n>	<p><u>DTR (CT108/2) behavior</u></p> <p>DTR (CT108/2) behavior - Monitoring on/off transitions of the RS232 DTR line of the PC.</p> <p>AT&D0 DTR is ignored. Allows the operation with PCs which do not run DTR.</p> <p>AT&D1 A DTR on/off transition causes the modem to react as if it had received an abort sequence +++. The modem switches to the input mode without hanging up.</p> <p>AT&D2 A DTR on/off transition causes the modem to hang up. Going off-hook automatically is not possible. (default)</p> <p>AT&D3 A DTR on/off transition causes the modem to perform a reset as if an ATZ command had been executed. A preceded AT&Y command decides if either the default 0 or 1 is loaded.</p>																										
AT\D<n>	<p><u>DTMF mode activation/deactivation</u></p> <p>AT\D0 Switch off DTMF mode (default)</p> <p>AT\D1 Switch on DTMF mode</p> <p>When the DTMF mode is activated, the modem will be set into DTMF mode for incoming calls. After the signal OK, the modem requires the input of the 4-digit PIN. The PIN input is acoustically acknowledged.</p> <p>The following commands can be performed via the phone keys:</p> <table border="0"> <thead> <tr> <th data-bbox="406 1086 478 1120">Key</th> <th data-bbox="574 1086 686 1120">Meaning</th> </tr> </thead> <tbody> <tr> <td data-bbox="406 1131 446 1164">0*</td> <td data-bbox="574 1131 845 1164">Terminate connection.</td> </tr> <tr> <td data-bbox="406 1198 462 1232">1*x</td> <td data-bbox="574 1198 861 1232">Control switch output 1</td> </tr> <tr> <td data-bbox="502 1243 534 1276">x:</td> <td data-bbox="590 1243 933 1276">1: Set switch output 1</td> </tr> <tr> <td></td> <td data-bbox="590 1288 965 1321">0: Reset switch output 1</td> </tr> <tr> <td></td> <td data-bbox="590 1332 742 1366">Return: "OK"</td> </tr> <tr> <td data-bbox="406 1388 462 1422">2*x</td> <td data-bbox="574 1388 861 1422">Control switch output 2</td> </tr> <tr> <td data-bbox="502 1433 534 1467">x:</td> <td data-bbox="590 1433 933 1467">1: Set switch output 2</td> </tr> <tr> <td></td> <td data-bbox="590 1478 965 1512">0: Reset switch output 2</td> </tr> <tr> <td></td> <td data-bbox="590 1523 742 1556">Return: "OK"</td> </tr> <tr> <td data-bbox="406 1579 446 1612">3*</td> <td data-bbox="574 1579 941 1612">Query of the two alarm inputs:</td> </tr> <tr> <td></td> <td data-bbox="590 1624 1364 1657">Both alarm inputs are output as HIGH or LOW in succession. xxx</td> </tr> <tr> <td></td> <td data-bbox="590 1668 1125 1702">Return: "OK" – Status input 1 – Status input 2</td> </tr> </tbody> </table>	Key	Meaning	0*	Terminate connection.	1*x	Control switch output 1	x:	1: Set switch output 1		0: Reset switch output 1		Return: "OK"	2*x	Control switch output 2	x:	1: Set switch output 2		0: Reset switch output 2		Return: "OK"	3*	Query of the two alarm inputs:		Both alarm inputs are output as HIGH or LOW in succession. xxx		Return: "OK" – Status input 1 – Status input 2
Key	Meaning																										
0*	Terminate connection.																										
1*x	Control switch output 1																										
x:	1: Set switch output 1																										
	0: Reset switch output 1																										
	Return: "OK"																										
2*x	Control switch output 2																										
x:	1: Set switch output 2																										
	0: Reset switch output 2																										
	Return: "OK"																										
3*	Query of the two alarm inputs:																										
	Both alarm inputs are output as HIGH or LOW in succession. xxx																										
	Return: "OK" – Status input 1 – Status input 2																										

Command	Description								
AT\D<n> (Continuation)	<p>Acoustic response</p> <table border="0"> <thead> <tr> <th></th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>short long tone – short pause - short high tone</td> <td>OK ready,command executed, PIN ok</td> </tr> <tr> <td>long low tone</td> <td>ERROR invalid command, wrong PIN</td> </tr> <tr> <td>high long tone</td> <td>LOW Alarm input active HIGH Alarm input inactive</td> </tr> </tbody> </table> <p>If no DTMF tone is entered for more than 25 seconds, the modem will automatically disconnect. If the INSYS modem recognizes the call tone of a modem that wants to establish a connection, it will immediately switch to data mode.</p>		Description	short long tone – short pause - short high tone	OK ready,command executed, PIN ok	long low tone	ERROR invalid command, wrong PIN	high long tone	LOW Alarm input active HIGH Alarm input inactive
	Description								
short long tone – short pause - short high tone	OK ready,command executed, PIN ok								
long low tone	ERROR invalid command, wrong PIN								
high long tone	LOW Alarm input active HIGH Alarm input inactive								
AT+DS=<n>	<p><u>Activate/deactivate V.42bis data compression</u></p> <p>AT+DS=0 Deactivates V.42bis data compression AT+DS=3 Activates V.42bis data compression (default)</p>								
AT+DS44=<n>	<p><u>Activate/deactivate V.44 data compression</u></p> <p>AT+DS44=0 Deactivates V.44 data compression AT+DS44=3 Activates V.44 data compression (default)</p>								
ATE<n>	<p><u>Command entry Echo</u></p> <p>This command toggles the responses, which the modem creates as reactions from application commands (Echo), ON or OFF.</p> <p>ATE0 Switch off Echo ATE1 Switch on Echo (default)</p>								
AT%E<n>	<p><u>Automatic Retrain</u></p> <p>When transmission problems occur, the modem executes a retrain procedure. After three unsuccessful retrain attempts, the modem will hang up.</p> <p>AT%E0 Retrain not allowed AT%E1 Retrain allowed AT%E2 Fall back, fall forward allowed (default)</p>								
AT*E	<p><u>Terminate remote configuration</u></p> <p>The command AT*E terminates a remote configuration.</p>								
AT&F	<p><u>Loading the default factory settings</u></p> <p>The modem loads the default factory setting from the internal, nonvolatile memory. This puts the modem into a defined basic state. AT&F also overwrites a part of the S registry. The INSYS Modem 336/56k 4.1 (UL) has two factory settings (AT&F0, AT&F1).</p>								

Command	Description
AT+GCI=<n>	<p><u>Set country code</u></p> <p>The command AT+GCI allows the customization of the modem for different countries. As default, the modem is set to Europe (CTR21) with AT+GCI=FD. Currently, the modem is only authorized for this country profile.</p> <p>Note: Please note that all country settings will result in ALL modem settings being reset to the default settings (such as AT&F&W). Therefore, please select a country profile first and adjust the settings afterwards.</p>
ATH	<p><u>Disconnect connection</u></p> <p>The modem terminates the connection.</p>
AT*H<n>	<p><u>Declaration of the connection protocol speed (MNP 10)</u></p> <p>AT*H<n> determines the speed that is used to exchange the declarations during the MNP10 connection setup before the modems enter the MNP 10 mode.</p> <p>AT*H0 Connection setup takes place with the highest possible speed. (default)</p> <p>AT*H1 Connection setup takes place with 1,200 bps</p> <p>AT*H2 Connection setup takes place with 4800 bps</p>
ATI<n>	<p><u>Identification</u></p> <p>The modem sends an identification to the PC, according to the following parameter:</p> <p>ATI0 Product code</p> <p>ATI1 Previously calculated EEPROM checksum</p> <p>ATI2 Calculation of the EEPROM checksum and comparison with the previously calculated checksum stored in the EPROM. OK for correct comparison.</p> <p>ATI3 Number of firmware version in the EEPROM</p> <p>ATI4 Modem version number</p> <p>ATI5 Country code parameter (Germany = 006/Europe = 253)</p> <p>ATI6 Version number and revision of "data pump"</p>
AT*I	<p><u>Manual query of the alarm input</u></p> <p>Response <Input 1>,<Input 2></p> <p>The response provides the values "1" for inactive (open) and "0" for active (connected to ground).</p>
AT+IPR=<n>	<p><u>Determine baud rate</u></p> <p>The command AT+IPR switches the automatic baud rate detection on and off.</p> <p>AT+IPR=0 Activates the automatic baud rate detection (default)</p> <p>AT+IPR=<n> Sets the modem to the fixed baud rate n. The following baud rates are supported: 300, 1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600 and 115,200.</p> <p>The setting AT+IPR is not saved with AT&W, which means that in order to inactivate auto bauding, the command AT+IPR must be sent to the modem every time it is switched on.</p>

Command	Description
AT&K<n>	<p>Select data flow control between the PC and the modem (handshake)</p> <p>Fax operation default is RTS/CTS.</p> <p>AT&K0 No data flow control</p> <p>AT&K3 Select data flow control RTS/CTS (default)</p> <p>AT&K4 Select data flow control XON/XOFF</p> <p>AT&K5 Select transparent data flow control XON/XOFF</p> <p>AT&K6 Select RTS/CTS and XON/XOFF data flow control</p> <p>AT&K8 Activates the controlled half duplex operation on the serial interface for RS485. In this mode, the CTS signal is deactivated (high), while the INSYS modem sends data at the serial interface. Thus, the CTS signal can be used as driver release signal for a RS485 driver. The polarity can be set with AT&R.</p>
AT-K<n>	<p><u>Extended MNP functions (MNP 10)</u></p> <p>This command determines if a V.42LAP-M connection can be switched to a MNP 10 connection</p> <p>AT-K0 Disables switching from V.42 LAP-M to MNP 10 (default)</p> <p>AT-K1 Enables switching from V.42 LAP-M to MNP 10</p>

Command	Description
AT\K	<p><u>Break control</u></p> <p>The modem reacts to a break (receive path OFF for a certain amount of time), which it receives from another modem or from the PC, or from the command AT\B according to the parameters.</p> <p>1. Situation In case of a break from the application during the data connection to another modem:</p> <p>AT\K0 Modem enters the command mode and sends no break to the other modem</p> <p>AT\K1 Modem deletes the data buffer and sends a break to the other modem</p> <p>AT\K2 See AT\K1</p> <p>AT\K3 Modem immediately sends break to the other modem; data buffers are not deleted</p> <p>AT\K4 See AT\K0</p> <p>AT\K5 Modem inserts break into the data transmitted to the other modem</p> <p>2. Situation During a data connection, the modem was put into command mode by an escape sequence +++. In this condition, the command AT\B will send a break to the other modem. In this situation, the parameter <i>n</i> will cause the following:</p> <p>AT\K0 Modem deletes the data buffer and sends a break to the other modem</p> <p>AT\K1 See AT\K0</p> <p>AT\K2 Modem sends break to the other modem without delay</p> <p>AT\K3 See AT\K2</p> <p>AT\K4 Modem inserts break into the data transmitted to the other modem</p> <p>AT\K5 See AT\K4 – Return from the online command mode into the data mode via the ATO command.</p> <p>3. Situation In the case a break is received from another modem during a connection that has not been error corrected, the parameters cause the following:</p> <p>AT\K0 Modem deletes the data buffer and sends a break to the PC</p> <p>AT\K1 See AT\K0</p> <p>AT\K2 Modem sends a break to the PC without delay</p> <p>AT\K3 See AT\K2</p> <p>AT\K4 Modem sends a break to the application, which is embedded into the data that was received from the other modem</p> <p>AT\K5 Like AT\K4</p>

Command	Description
ATL<n>	<p><u>Speaker volume</u></p> <p>This command regulates the speaker volume (see command ATM).</p> <p>ATL1 Speaker volume low (default)</p> <p>ATL2 Speaker volume medium</p> <p>ATL3 Speaker volume high</p>
AT%L	<p><u>Display level of the received signal</u></p> <p>The value that is reported from the modem equals the already amplified level within the modem, not the phone line level.</p> <p>Large AT%L responses imply a low signal level; small values imply a high signal level (009 = -9db, 043 = -43db)</p>
AT*L<n>	<p><u>Determines the automatic speed limitation</u></p> <p>The automatic speed limitation is used to automatically achieve the least possible error rate for connections without error correction.</p> <p>In the factory settings the speed limitation is always switched on (AT*L0).</p> <p>If the limitation is switched off (AT*L1), the modem will always establish the connection on the phone side with the maximum possible speed (or the speed defined with AT+MS), irrespective of the data rate at the serial interface. This means that the INSYS Modem 336 will, for example, always attempt to establish a 33600 baud connection, even if the serial interface is only set to 9600 baud. Without error correction the high speed will obviously lead to higher bit error rates, which is usually disruptive.</p> <p>The automatic speed limitation (AT*L0) will limit the speed on the phone side to the speed of the serial interface.</p> <p>It should only be switched off if very low baud rates are employed or if the speed of the serial interface is changed during the connection.</p>
ATM<n>	<p><u>Speaker control</u></p> <p>This command regulates when the speaker is active (See command ATL<n>).</p> <p>ATM0 Speaker always OFF</p> <p>ATM1 Speaker ON during dialing and connection setup (default)</p> <p>ATM2 Speaker always ON</p> <p>ATM3 Speaker on during connection setup</p>

Command	Description																									
<p>AT+MR=<n></p>	<p><u>Show modulation type</u></p> <p>The command AT+MR=<n> enables the display of the modulation type after the message CONNECT</p> <p>AT+MR=0 Switches the display function OFF (default).</p> <p>AT+MR=1 Switches the display function ON. The displayed value applies to the sent data.</p> <p>AT+MR=2 Switches the display function ON. The displayed value applies to the received data.</p> <p>If the display function is switched on the modem will display the modulation type and the line speed after the message CONNECT. After the message CONNECT, the line „+MCR:” appears, “ followed by the modulation type (see command AT+MS) and the line “+MRR:”, followed by the line speed.</p> <p>Note: The AT+MR command is useful for a connection check.</p>																									
<p>AT+MS=<Modulation>, [Automode], [Send Minbaud, Send Maxbaud], [Receive Minbaud, Receive Maxbaud]</p>	<p><u>Select modulation type</u></p> <p>AT+MS determines the modulation type. The command enables or disables automatic modulation recognition and defines the highest and lowest possible connection speed. The command has the format AT+MS=<Modulation>, [Automode], [Send Minbaud, Send Maxbaud], [Receive Minbaud, Receive Maxbaud]</p> <p>AT+MS? Shows the current setting</p> <p>AT+MS=? Displays a list of possible parameters</p> <p>Default factory setting:</p> <table border="0"> <tr> <td>INSYS Modem 56k</td> <td>V92</td> </tr> <tr> <td>INSYS Modem 336</td> <td>V34</td> </tr> </table> <p>Parameter modulation:</p> <p>The modulation parameter determines the preferred (automode = 1) or the mandatory (automode = 0) modulation type.</p> <p>The following values are available:</p> <table border="0"> <tr> <td>V21</td> <td>V.21</td> <td>300</td> </tr> <tr> <td>V22</td> <td>V.22</td> <td>1200</td> </tr> <tr> <td>V22B</td> <td>V.22bis</td> <td>2400 or 1200</td> </tr> <tr> <td>V23C</td> <td>V.23</td> <td>1200</td> </tr> <tr> <td>V32</td> <td>V.32</td> <td>9600 or 4800</td> </tr> <tr> <td>V32B</td> <td>V.32bis</td> <td>14400, 12000, 9600, 7200 or 4800</td> </tr> <tr> <td>V34</td> <td>V.34</td> <td>33600, 31200, 28800, 26400, 24000, 21600, 19200, 16800, 14400, 12000, 9600, 7200, 4800 or 2400</td> </tr> </table>	INSYS Modem 56k	V92	INSYS Modem 336	V34	V21	V.21	300	V22	V.22	1200	V22B	V.22bis	2400 or 1200	V23C	V.23	1200	V32	V.32	9600 or 4800	V32B	V.32bis	14400, 12000, 9600, 7200 or 4800	V34	V.34	33600, 31200, 28800, 26400, 24000, 21600, 19200, 16800, 14400, 12000, 9600, 7200, 4800 or 2400
INSYS Modem 56k	V92																									
INSYS Modem 336	V34																									
V21	V.21	300																								
V22	V.22	1200																								
V22B	V.22bis	2400 or 1200																								
V23C	V.23	1200																								
V32	V.32	9600 or 4800																								
V32B	V.32bis	14400, 12000, 9600, 7200 or 4800																								
V34	V.34	33600, 31200, 28800, 26400, 24000, 21600, 19200, 16800, 14400, 12000, 9600, 7200, 4800 or 2400																								


Command	Description		
AT+MS=<Modulation>,[Automode],[Send Minbaud, Send Maxbaud],[Receive Minbaud, Receive Maxbaud] (Continuation)	V90	V.90	56000, 54667, 53333, 52000, 50667, 49333, 48000, 46667, 48000, 46667, 45333, 42667, 41333, 40000, 38667, 37333, 36000, 34667, 33333, 32000, 30667, 29333, 28000
	V92	V.92	56000, 54667, 53333, 52000, 50667, 49333, 48000, 46667, 48000, 46667, 45333, 42667, 41333, 40000, 38667, 37333, 36000, 34667, 33333, 32000, 30667, 29333, 28000
	B103	Bell 103	300
	B212	Bell 212	1200/75
Parameter Automode: The optional parameter automode determines whether the modem automatically adjusts to the desired modulation type. The following values may be used: 0 Automatic modulation adjustment switched off 1 Automatic modulation adjustment switched on			
Parameter Reception Minbaud: The optional parameter minbaud determines the lowest possible baud rate for modem reception.			
Parameter Reception Maxbaud: The optional parameter maxbaud determines the highest possible baud rate for modem reception.			
Parameter Send Minbaud: The optional parameter minbaud determines the lowest possible baud rate for modem sending.			
Parameter Send Maxbaud: The optional parameter maxbaud determines the highest possible baud rate for modem sending.			

Command	Description
AT*M<n>	<p><u>Remote terminal selection</u></p> <p>Defines the protocol that is used to send the alarm string to the network provider.</p> <p>AT*M0 The remote terminal is a normal fixed network modem (default)</p> <p>AT*M1 The remote terminal is a mobile phone with network access via PET/IXO/TAP protocol and data format 8N1 (e.g. D1 and E networks in Germany)</p> <p>AT*M2 The remote terminal is a mobile phone with network access via EMI/UCP protocol and data format 7E1</p> <p>AT*M3 The remote terminal is a mobile phone with network access via PET/IXO/TAP protocol and data format 7E1</p> <p>AT*M4 The remote terminal is a mobile phone with network access via EMI/UCP and data format 8N1 (e.g. D2 network in Germany)</p> <p>AT*M5 The remote terminal is a fax machine</p> <p>AT*M6 Fixed network SMS: The SMS gateway (e.g. Deutsche Telekom via phone number 01930100) is not tied to a certain mobile phone network, but sends SMS to any mobile or fixed network phone.</p> <p>Note: For the remote terminals AT*M1 to AT*M4, only recipients in the network of one GSM provider may be addressed.</p> <p>Your network provider will inform you about the current requirements to send SMS to mobile phones.</p> <p>Relevant commands: AT*V, AT*V<n> Definition of messages/phone numbers</p> <p style="padding-left: 100px;">AT*Z0 Definition of the SMS service center</p>
AT\N<n>	<p><u>Select error correction</u></p> <p>This command determines which type of error correction should preferably be used for subsequent connections.</p> <p>AT\N0 Switching off error correction (normal buffered mode)</p> <p>AT\N1 Bit direct mode (only for special data formats)</p> <p>AT\N2 Selects V.42LAP-M or MNP 4 error correction. If no error corrected connection can be established, the modem will hang up.</p> <p>AT\N3 Selects V.42LAP-M or MNP 4 error correction. If such a connection cannot be established, the modem will attempt to establish a connection that is not error corrected. (default)</p> <p>AT\N4 Exclusively selects a V.42 LAP-M connection.</p> <p>AT\N5 Dials exclusively MNP 4 connections.</p>


Command	Description
AT*N<n>=<nr> >	<p><u>Permitted numbers for selective call acceptance</u></p> <p>Definition of 8 authorized phone numbers, for which modem access is permitted. Only if the transmitted phone number matches a phone number that was entered in the list will the modem report RING for an incoming call or will accept the call according to the settings of ATS0 (the line RI is activated with each call, irrespective of that fact). The selective call acceptance is switched on and off with AT&A.</p> <p>AT*Nn=<nr></p> <p><n> Describes the storage location – range of values: 0..7.</p> <p><no> Permitted phone number consists of numbers and the wild card “*” for exactly one character. The phone number may not contain separators such as brackets or space characters. After they were entered, the phone numbers are immediately saved in the power fail-safe memory of the modem.</p> <p>AT*N<n>=<n1> The memory N<n> allows all phone numbers ending in <n1>.</p> <p>AT*N99= Deletes all existing entries in the list</p> <p>AT*N? Displays all stored entries</p> <p>Example: AT*N5=1234 allows all calls ending with 1234. E.g.: 0175/9991234, 0941/8881234, or +4940/7771234 AT*N1=01234567** permits all calls from the block of numbers 01234567-00 to 01234567-99</p>
AT*N99=	<p><u>Delete the list of permitted phone numbers for the selective call answer</u></p> <p>The command AT*N99= deletes the entire list of phone numbers for the selective call answer.</p>
AT*N?	<p><u>Output of the list of permitted phone numbers</u></p> <p>AT*N? activates the output of the entire saved list of permitted phone numbers for the selective call answer.</p>
AT%N	<p><u>Output of the last rejected phone number</u></p> <p>For active selective call answer (AT&A1), the last phone number, whose call was rejected, will be displayed.</p> <p>Note: This phone number is not saved in the power fail-safe memory of the modem.</p>
ATO<n>	<p><u>Return to online data mode</u></p> <p>If the modem is in online command mode, it will return to online data mode. If the modem is in offline command mode, it will report ERROR.</p> <p>ATO0 Return to online data mode.</p> <p>ATO1 Before the modem switches to online data mode, a retrain procedure is provoked.</p>
ATP	<p><u>Switch on pulse dialing method (deactivated for some models)</u></p> <p>Starting with this command, each dial-up is performed with the pulse dialing method, until an ATT or ATDT command switches it back to tone dialing.</p>

Command	Description
AT*P<n>	<p><u>Password query</u></p> <p>AT*P0 Switches the password query off after the connection has been established. (default)</p> <p>AT*P1 Switches the password query on after the connection has been established.</p> <p>If the password query is activated, the modem will query the password after CONNECT has taken place. After the password has been entered correctly, the actual CONNECT will take place and data may be transmitted. If a wrong password was entered, the modem will hang up. The password is the same as for remote control and is set with AT*C.</p>
ATQ<n>	<p><u>Quiet control</u></p> <p>This command toggles sending messages from the modem to the application ON and OFF.</p> <p>ATQ0 Send messages to application (default).</p> <p>ATQ1 Don't send messages to application.</p>
AT%Q	<p><u>Display telephone call quality</u></p> <p>Displays the quality of the data connection (deviation from the eye diagram). Low values indicate a good line quality. The line quality value must be evaluated differently depending on the negotiated data rate.</p> <p>Connections with more than 9600 baud will reach the value "000" for good lines and should not have values of more than "010".</p> <p>For connections with 33600 baud good lines will have values between 010...030. Depending on the settings and the modulation type a fall back or retrain is triggered if the line quality is too bad to enable a new negotiation of the connection (if necessary with a slower speed).</p> <p>High values indicate bad quality. These values are constantly updated during a connection. If the value increases significantly during a connection, the quality will deteriorate. After a previous AT%E command, an <i>Autoretrain</i> is performed.</p>

Command	Description
AT\Q<n>	<p><u>Quiet Call</u></p> <p>Quiet Call will switch of the phone connected in series at the first ring. In connection with the selective call answer (AT&N<n>), calls from a previously defined phone number can take place without a ring of the phone connected in series. If the phone number is not detected by the modem, the phone is switched on again after the first ring.</p> <p>AT\Q0 Switches Quiet Call off (default)</p> <p>AT\Q1 Activates Quiet Call. The phone connected in series is disconnected, as soon as an entire ring signal cycle is detected on the line.</p> <p>AT\Q2 Activates Quiet Call. The phone connected in series is disconnected, as soon as a ring signal flank is detected on the line.</p> <p>The selection between the settings \Q1 or \Q2 depends on the circumstances at the phone connection. For \Q2 in connection with pulse dialing, phones that are connected in parallel will sometimes result in an erroneous detection of a ring signal flank. When using pulse dialing at the phones connected in series, AT\Q1 must be used.</p>
AT&R<n>	<p><u>RTS/ CTS behavior</u></p> <p>This command determines how the modem treats the RTS/CTS (CT105/CT106) data flow control lines.</p> <p>(See also command AT&K).</p> <p>AT&R0 CTS behavior complies with V.25bis. CTS is deactivated during the connection setup after recognition of the response or ringing tones and will only be activated after the connection is set up. During the controlled half duplex operation (AT&K8) CTS is active, if the modem sends data at the serial interface. When data is received at the serial interface, CTS is inactive.</p> <p>AT&R1 CTS only switches to OFF when this is required by the data flow control. During the controlled half duplex operation (AT&K8) CTS is inactive, if the modem sends data at the serial interface. When data is received at the serial interface, CTS is active. (default)</p>
AT*R<n>	<p><u>Switches the remote control on and off</u></p> <p>AT*R0 Switches the remote control OFF.</p> <p>AT*R1 Switches the remote control ON (default).</p>
ATS<n>	<p><u>Read/write of the S registry</u></p> <p>Depending on the country settings, the S registries may only be changed within certain limits. The modem still reports OK although the value has not changed as specified. We recommend checking the results after each write attempt, using the ATS<n>? command.</p> <p>ATS<n>=<x> Sets the S registry n to the value x.</p> <p>ATS<n>? Shows the value of the S registry n.</p>

Command	Description
AT%S<n>	<p data-bbox="400 226 927 259"><u>Ability to switch between DCD and DSR lines</u></p> <p data-bbox="400 277 983 383">AT%S0 The DSR signal is on the DSR line The DCD signal is on the DCD line (default)</p> <p data-bbox="400 400 983 506">AT%S1 The DSR signal is on the DCD line The DCD signal is on the DSR line (Interchangeability of the lines)</p>
AT&S	<p data-bbox="400 524 564 557"><u>DSR behavior</u></p> <p data-bbox="400 575 1270 609">This command determines how the modem treats its DSR (CT107) output.</p> <p data-bbox="400 624 879 658">AT&S0 DSR always ON (default).</p> <p data-bbox="400 663 1425 723">AT&S1 DSR ON after a response tone has been detected; DSR OFF when no carrier is detected any more.</p>
AT*S<n>	<p data-bbox="400 748 1027 781"><u>Selects the transmission speed at the serial interface.</u></p> <p data-bbox="400 797 1430 902">The settings can be selected with this command. This will, however, not switch off the automatic detection. As soon as an AT is recognized, the serial interface will set itself to the recognized speed and protocol.</p> <p data-bbox="400 920 1434 994">If no AT is sent, the selected speed is maintained until a hardware reset is performed. If the selected speed should be maintained longer, it must be stored with AT&W.</p> <p data-bbox="400 1010 459 1055"></p> <p data-bbox="557 1025 1437 1099">This command will not change the registry S23! It only changes if the automatic speed detection is used.</p> <p data-bbox="400 1115 1002 1149">AT*S0 Maintaining the current speed.</p> <p data-bbox="400 1164 732 1198">AT*S1 300 bps</p> <p data-bbox="400 1214 732 1247">AT*S2 600 bps</p> <p data-bbox="400 1263 754 1296">AT*S3 1,200 bps</p> <p data-bbox="400 1312 754 1346">AT*S4 2,400 bps</p> <p data-bbox="400 1361 754 1395">AT*S5 4,800 bps</p> <p data-bbox="400 1411 754 1444">AT*S6 9,600 bps</p> <p data-bbox="400 1460 770 1494">AT*S7 19,200 bps</p> <p data-bbox="400 1509 770 1543">AT*S8 38,400 bps</p> <p data-bbox="400 1559 770 1592">AT*S9 57,600 bps</p> <p data-bbox="400 1608 783 1641">AT*S10 115,200 bps</p>

Command	Description																																													
AT-STE=<n>	<p><u>Priority Circuit for Modems with Phones Connected in Series</u></p> <p>The INSYS Modem 336/56k 4.1 (UL) gives a phone connected in series priority, to make sure it interferes as little as possible with the usage of the phone connection. (see Chapter 5.10)</p> <p>Monitoring Functions:</p> <ol style="list-style-type: none"> 1) Detecting a busy phone line During a dial-up attempt, the model detects the busy phone line. (LINE IN USE). 2) Going off-hook on account of a telephone connected in series If a telephone connected in series goes off-hook during an existing modem connection, the modem will immediately terminate the connection. The telephone is connected to the line and receives a dialing tone. 3) Remote terminal connection abort When the remote terminal aborts a connection, the modem will immediately hang up. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Command</th> <th style="text-align: center;">Function 1</th> <th style="text-align: center;">Function 2</th> <th style="text-align: center;">Function 3</th> <th></th> </tr> </thead> <tbody> <tr> <td>AT-STE=0</td> <td style="text-align: center;">--</td> <td style="text-align: center;">--</td> <td style="text-align: center;">--</td> <td style="text-align: right;">(default)</td> </tr> <tr> <td>AT-STE=1</td> <td style="text-align: center;">√</td> <td style="text-align: center;">-</td> <td style="text-align: center;">--</td> <td style="text-align: right;">--</td> </tr> <tr> <td>AT-STE=2</td> <td style="text-align: center;">--</td> <td style="text-align: center;">√</td> <td style="text-align: center;">--</td> <td></td> </tr> <tr> <td>AT-STE=3</td> <td style="text-align: center;">√</td> <td style="text-align: center;">√</td> <td style="text-align: center;">--</td> <td></td> </tr> <tr> <td>AT-STE=4</td> <td style="text-align: center;">--</td> <td style="text-align: center;">--</td> <td style="text-align: center;">√</td> <td></td> </tr> <tr> <td>AT-STE=5</td> <td style="text-align: center;">√</td> <td style="text-align: center;">--</td> <td style="text-align: center;">√</td> <td></td> </tr> <tr> <td>AT-STE=6</td> <td style="text-align: center;">--</td> <td style="text-align: center;">√</td> <td style="text-align: center;">√</td> <td></td> </tr> <tr> <td>AT-STE=7</td> <td style="text-align: center;">√</td> <td style="text-align: center;">√</td> <td style="text-align: center;">√</td> <td></td> </tr> </tbody> </table>	Command	Function 1	Function 2	Function 3		AT-STE=0	--	--	--	(default)	AT-STE=1	√	-	--	--	AT-STE=2	--	√	--		AT-STE=3	√	√	--		AT-STE=4	--	--	√		AT-STE=5	√	--	√		AT-STE=6	--	√	√		AT-STE=7	√	√	√	
Command	Function 1	Function 2	Function 3																																											
AT-STE=0	--	--	--	(default)																																										
AT-STE=1	√	-	--	--																																										
AT-STE=2	--	√	--																																											
AT-STE=3	√	√	--																																											
AT-STE=4	--	--	√																																											
AT-STE=5	√	--	√																																											
AT-STE=6	--	√	√																																											
AT-STE=7	√	√	√																																											
ATT	<p><u>Switching on inband signaling</u></p> <p>Starting with this command, each dial up is performed with the tone dialing method, until an ATP or ATDP command switches it back to pulse dialing.</p>																																													
AT-TRV	<p><u>Phone Line Voltage Measurement (Tip Ring Voltage)</u></p> <p>Use the command AT-TRV to measure the phone line voltage (Tip Ring Voltage). The result is yielded in volt. For an existing connection the voltage range will be 5V – 12V. Otherwise the voltage is higher than 20V. If the voltages are lower than 2V, no phone line is connected.</p>																																													

Command	Description																																								
AT-TTE=U1 , U2 , U3	<p><u>Parameter configuration for priority circuit</u></p> <p>The command AT-TTE=U1 , U2 , U3 will set the change of the loop voltage. The settings are required to detect AT-STE=<n>. (see Chap. 5.13)</p> <p>U1 Line busy Factory setting: u1=1000 (10V)</p> <p>U2 Going off-hook on account of a telephone connected in series Factory setting: u2=100 (1V)</p> <p>U3 Remote terminal connection abort Factory setting: u3=500 (5V)</p> <p>These settings cannot be stored with AT&W in the power fail-safe memory.</p>																																								
AT*U<n>	<p><u>Select the data format at the serial interface</u></p> <p>The data format can be preselected with this command. This will, however, not switch off the automatic detection. As soon as an AT is recognized, the serial interface will set itself to the recognized speed and protocol.</p> <p>If no AT is sent, the selected protocol is maintained until a hardware reset is performed. If the selected protocol should be maintained longer, it must be stored with AT&W.</p> <p> This command will not change the registry S23! It only changes if the automatic speed and protocol detection is used.</p> <table border="0"> <tr> <td>AT*U0</td> <td>8 data bits,</td> <td>no parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U1</td> <td>7 data bits,</td> <td>odd parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U2</td> <td>7 data bits,</td> <td>even parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U3</td> <td>7 data bits,</td> <td>no parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U4</td> <td>7 data bits,</td> <td>odd parity,</td> <td>2 stop bits</td> </tr> <tr> <td>AT*U5</td> <td>7 data bits,</td> <td>even parity,</td> <td>2 stop bits</td> </tr> <tr> <td>AT*U6</td> <td>7 data bits,</td> <td>no parity,</td> <td>2 stop bits</td> </tr> <tr> <td>AT*U7</td> <td>8 data bits,</td> <td>odd parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U8</td> <td>8 data bits,</td> <td>even parity,</td> <td>1 stop bit</td> </tr> <tr> <td>AT*U9</td> <td>8 data bits,</td> <td>no parity,</td> <td>2 stop bits</td> </tr> </table>	AT*U0	8 data bits,	no parity,	1 stop bit	AT*U1	7 data bits,	odd parity,	1 stop bit	AT*U2	7 data bits,	even parity,	1 stop bit	AT*U3	7 data bits,	no parity,	1 stop bit	AT*U4	7 data bits,	odd parity,	2 stop bits	AT*U5	7 data bits,	even parity,	2 stop bits	AT*U6	7 data bits,	no parity,	2 stop bits	AT*U7	8 data bits,	odd parity,	1 stop bit	AT*U8	8 data bits,	even parity,	1 stop bit	AT*U9	8 data bits,	no parity,	2 stop bits
AT*U0	8 data bits,	no parity,	1 stop bit																																						
AT*U1	7 data bits,	odd parity,	1 stop bit																																						
AT*U2	7 data bits,	even parity,	1 stop bit																																						
AT*U3	7 data bits,	no parity,	1 stop bit																																						
AT*U4	7 data bits,	odd parity,	2 stop bits																																						
AT*U5	7 data bits,	even parity,	2 stop bits																																						
AT*U6	7 data bits,	no parity,	2 stop bits																																						
AT*U7	8 data bits,	odd parity,	1 stop bit																																						
AT*U8	8 data bits,	even parity,	1 stop bit																																						
AT*U9	8 data bits,	no parity,	2 stop bits																																						
ATV<n>	<p><u>Format of modem messages</u></p> <p>This command determines if the modem transmits messages to the application in short or long format.</p> <p>ATV0 Messages in short format, i.e. only the error number</p> <p>ATV1 Messages in long format, i.e. the error text (default)</p>																																								
AT\V<n>	<p><u>Format of connect rate messages</u></p> <p>AT\V0 This command enables the display of the connect message in three lines.</p> <p>AT\V1 This command enables the display of the connect message in one line. (default)</p>																																								

Command	Description
AT*V	<p><u>Definition of the common alarm texts (collective message)</u></p> <p>for simple alarm: Definition of the alarm text (maximum of 160 characters)</p> <p>for pulse alarm: Definition of the common part of the alarm message (maximum of 160 characters – within HSComm limited to 120 characters)</p> <p>To the input AT*V the modem responds with NEW TEXT: and expects the input of the alarm text (completed with <CR>)</p> <p>This command is not available in the remote operation mode.</p> <p>Relevant commands: AT*V, AT*V<n> Definition of messages/phone numbers AT&Z0 Definition of the SMS service center</p>
AT*V?	<p><u>Query of the common alarm texts (collective message)</u></p> <p>The common part of the alarm message is queried with the command AT*V?.</p>
AT*V<n>	<p><u>Definition of the variable alarm texts and phone numbers</u></p> <p>Definition of the alarm texts and phone numbers for the SMS dispatch.</p> <p>After the input AT*V1 or AT*V2 the modem responds with NEW TEXT: and expects an input in the format phone number,message<CR></p> <p>Phone number Enter without characters for accessing the exchange (only required for service number)</p> <p>Message Alarm message (maximum of 80 characters)</p> <p>For the transmission, the variable part (maximum of 80 characters) will be attached to the common part (maximum of 160 characters) of the collective message. Of the maximum of 240 characters, the first 160 characters are sent as SMS.</p> <p>Relevant commands: AT*V<n> Definition of messages/phone numbers AT&Z0 Definition of the SMS service center</p>
AT*V<n>?	<p><u>Query of the variable alarm texts and phone numbers</u></p> <p>The variable part of the alarm message and the target phone number are queried with AT*V1? or AT*V2? .</p>

Command	Description
AT&V<n>	<p>Show the configurations</p> <p>AT&V0 The active configuration of the modem, the saved user defaults and the saved phone numbers 0 to 3 (the parameter 0 may be omitted) are displayed.</p> <p>AT&V1 Displays the diagnostic data of the last connection (connection partner, reason for disconnect).</p> <p>TERMINATION REASON: Reason for connection termination. E.g.: connection termination via command (ATH: „LOCAL REQUEST“)</p> <p>LAST TX rate: Last baud rate at the phone line in send direction, prior to the termination.</p> <p>HIGHEST TX rate: Highest baud rate that was achieved at the phone line in send direction, prior to the termination.</p> <p>LAST RX rate: Last baud rate at the phone line in receive direction, prior to the termination.</p> <p>HIGHEST RX rate: Highest baud rate that was achieved at the phone line in receive direction, prior to the termination.</p> <p>Note: The data rates may vary if a fall forward, fall back or retrain occurred during the connection. To impact the negotiated data rate, use the command AT+MS.</p> <p>PROTOCOL: Displays the used error correction protocol. „LAPM“ equals a V.42 secured connection. For „NONE“, the connection was not error corrected (the error corrected can be influenced with the command AT\N).</p> <p>COMPRESSION: Displays the used data compression method. The example shows the used compression method V.42bis (the compression method can be set with the command AT%C).</p> <p>LINE QUALITY: Displays the quality of the data connection (deviation from the eye diagram). Low values indicate a good line quality. The line quality value must be evaluated differently depending on the negotiated data rate.</p> <p>Connections with more than 9600 baud will reach the value “000” for good lines and should not have values of more than “010”.</p> <p>For connections with 33600 baud good lines will have values between 010...030. Depending on the settings and the modulation type a fall back or retrain is triggered if the line quality is too bad to enable a new negotiation of the connection (if necessary with a slower speed).</p> <p>Rx LEVEL: Displays the receive level (which is internally applied at the modem chip) in -dBm. High values indicate a low input level, low values indicate a high input level. The optimum receives levels range from approx. 012 to 028. To high levels could cause distortions; too low levels will cause the line noise to have a negative impact on the connection quality.</p> <p>Local Rtrn Count: Number of retrains (renegotiation of the connection), triggered by the local modem.</p> <p>Remote Rtrn Count: Number of retrains (renegotiation of the connection), triggered by the remote modem.</p> <p>AT&V3 Display of the currently set baud rate (AT*S<n>) as well as the currently set data format (AT*U<n>).</p>

Command	Description
AT+VCID=<n>	<p><u>Set CLIP</u></p> <p>With this function, the phone number of the caller can be displayed during an incoming call.</p> <p>(Only for phone lines or systems that support CLIP. If you want to use the CLIP function, please ask your network provider, if your connection supports this function.</p> <p>The following countries support CLIP: Australia, Belgium, China, Denmark, Germany, Finland, Great Britain, Hong Kong, India, Ireland, Iceland, Italy, Canada, Korea, New Zealand, The Netherlands, Norway, Austria, Sweden, Singapore, Spain, Taiwan, USA).</p> <p>AT+VCID=0 Switches the CLIP function OFF (default).</p> <p>AT+VCID=1 Switches the CLIP function ON and displays the ID preformatted for calls.</p> <p>AT+VCID=2 Switches the CLIP function ON and displays the ID unformatted for calls.</p>
AT+VRID=<n>	<p><u>Set last received CLIP</u></p> <p>The command AT+VRID displays the CLIP of the last caller.</p> <p>AT+VRID=0 displays the ID preformatted.</p> <p>AT+VRID=1 displays the ID unformatted.</p>
ATW<n>	<p><u>Error correction messages</u></p> <p>This command determines which data transmission rate information is provided for a CONNECT message.</p> <p>ATW0 The modem reports the baud rate between modem and application. (default)</p> <p>ATW1 During the connection setup, the modem reports the phone line speed, the error correction protocol and the application baud rate.</p> <p>ATW2 The modem reports the phone line speed.</p>
AT&W<n>	<p><u>Save configuration</u></p> <p>The command saves the current modem configuration including the S registry in one of the two user-defined defaults.</p> <p>AT&W0 Save in user default 0</p> <p>AT&W1 Save in user default 1</p>

Command	Description
ATX<n>	<p><u>Extended result messages, dial tone detection</u></p> <p>The command determines which group of messages the modem sends to the PC. This is important for PBXs, as often a leading 0 or 9 must be dialed before a dialing tone is heard on the line. <i>Blind dialing</i> (dialing without detecting the dialing tone) is activated or deactivated according to the parameter. The detection of the dialing tone, however, can always be enforced using the parameter W in the ATD dialing string (see command ATD). In the mode AT+FCLASS=1,2, the modem always sends the message CONNECT to the PC without specifying the transmission speed.</p> <p>ATX0 No detection of the dialing tone, i.e. an unsuccessful dialing attempt leads to the message NO CARRIER. No detection of the busy signal, i.e. when calling a busy line the message NO CARRIER is displayed. The message is displayed without specifying the speed.</p> <p>ATX1 As ATX0, but the CONNECT message contains the speed specification.</p> <p>ATX2 Dialing tone detection is active, i.e. a dialing attempt without the presence of a dialing tone leads to the message NO DIALTONE. No detection of the busy signal, i.e. when calling a busy line the message NO CARRIER is displayed.</p> <p>ATX3 No detection of the dialing tone, i.e. an unsuccessful dialing attempt leads to the message NO CARRIER. Busy signal detection active, i.e. when calling a busy line the message BUSY is displayed.</p> <p>ATX4 Dialing tone detection is active, i.e. a dialing attempt without the presence of a dialing tone leads to the message NO DIALTONE. (default) Busy signal detection is active, i.e. when calling a busy line the message BUSY is displayed.</p>
AT*X	<p><u>Terminate remote configuration</u></p> <p>The command AT*X terminates a remote configuration.</p>
AT&Y<n>	<p><u>Selection of user configuration for hardware reset</u></p> <p>AT&Y0 For a hardware reset following the AT&Y0-command, the user default 0 (created using the AT&W0 command) is loaded into the current modem configuration.</p> <p>AT&Y1 For a hardware reset following the AT&Y1-command, the user default 1 (created using the AT&W1 command) is loaded into the current modem configuration.</p>
AT*Yx,y	<p><u>Switch outputs</u></p> <p>x: Port (OUT1=0, OUT2=1) If no port is specified (x), OUT1 is used</p> <p>y: Desired condition of the output (relay open =0, relay closed =1)</p> <p>Default: AT*Y0,0 AT*Y1,0</p>

Command	Description
ATZ<n>	<p><u>Software reset</u></p> <p>The command causes the modem to perform a software reset. The modem will load the default saved by the user (according to the parameter). If no parameter is specified, the user default 0 is loaded.</p> <p>ATZ0 Software reset; afterwards the user default 0 is loaded.</p> <p>ATZ1 Software reset; afterwards the user default 1 is loaded.</p>
AT&Z<n>	<p><u>Save phone numbers</u></p> <p>The command saves four entries permanently in the EEPROM. Each entry may consist of up to 35 characters. The entries may be overwritten and must comply with the dialing string as described in the ATD command.</p> <p>AT&Z<n>=xxx n This is the number of the list entry (from 0 to 3). xxx This is the dialing string with the phone number.</p> <p>Layout of the alarm functions and security callback:</p> <p>AT&Z0=xxx Number of the modem or fax for a simple alarm message Service center number of the GSM provider for SMS access</p> <p>AT&Z1=xxx Enter the callback number for security callback</p> <p>AT&Z2=xxx Number of the mobile phone for simple alarm messages</p> <p>AT&Z3=xxx Number of the fax machine for collective alarm messages</p>
<Pause> +++ <Pause>	<p><u>Change from data mode to command mode (online command mode).</u></p> <p>1 second pause before and after the entry, no <CR> . After the response OK, an additional waiting period of 1 second for the re-entering of AT commands must be observed.</p>
<Pause> **** <Pause>	<p><u>Start of the remote configuration at the local modem</u></p> <p>After the 4 escape characters **** were entered at the local modem (1 second pause before and after the entry, no return - <CR> -), the remote configuration at the remote terminal is activated. After the response OK, an additional waiting period of 2 seconds for the re-entering of AT commands must be observed.</p>

8.2 Overview Fax and Voice Commands

More detailed information regarding the Fax Class 2 commands and a document regarding voice commands can be obtained from your supplier.

8.3 AT Messages

List of message numbers and messages texts depending on the command **ATX**.

Message Number Short form	Message text in long form	ATX<0>	ATX<1>	ATX<2>	ATX<3>	ATX<4>
+F4	+FCERROR	X	X	X	X	X
0	OK	X	X	X	X	X
1	CONNECT	X	X	X	X	X
2	RING	X	X	X	X	X
3	NO CARRIER	X	X	X	X	X
4	ERROR	X	X	X	X	X
5	CONNECT 1200	1	X	X	X	X
6	NO DIAL TONE	3	3	X	3	X
7	BUSY	3	3	3	X	X
8	NO ANSWER	1	X	X	X	X
9	CONNECT 600	1	X	X	X	X
10	CONNECT 2400	1	X	X	X	X
11	CONNECT 4800	1	X	X	X	X
12	CONNECT 9600	1	X	X	X	X
13	CONNECT 7200	1	X	X	X	X
14	CONNECT 12000	1	X	X	X	X
15	CONNECT 14400	1	X	X	X	X
16	CONNECT 19200	1	X	X	X	X
17	CONNECT 38400	1	X	X	X	X
18	CONNECT 57600	1	X	X	X	X
19	CONNECT 115200	1	X	X	X	X
20	CONNECT 230400	X	X	X	X	X
22	CONNECT 75TX/1200RX	1	X	X	X	X
23	CONNECT 1200TX/75RX	1	X	X	X	X
24	DELAYED	4	4	4	4	X
32	BLACKLISTED	4	4	4	4	X
33	FAX	X	X	X	X	X
35	DATA	X	X	X	X	X
40	CARRIER 300	X	X	X	X	X
44	CARRIER 1200/75	X	X	X	X	X
45	CARRIER 75/1200	X	X	X	X	X
46	CARRIER 1200	X	X	X	X	X
47	CARRIER 2400	X	X	X	X	X

Message Number Short form	Message text in long form	ATX<0>	ATX<1>	ATX<2>	ATX<3>	ATX<4>
48	CARRIER 4800	X	X	X	X	X
49	CARRIER 7200	X	X	X	X	X
50	CARRIER 9600	X	X	X	X	X
51	CARRIER 12000	X	X	X	X	X
52	CARRIER 14400	X	X	X	X	X
53	CARRIER 16800	X	X	X	X	X
54	CARRIER 19200	X	X	X	X	X
55	CARRIER 21600	X	X	X	X	X
56	CARRIER 24000	X	X	X	X	X
57	CARRIER 26400	X	X	X	X	X
58	CARRIER 28800	X	X	X	X	X
59	CONNECT 16800	1	X	X	X	X
61	CONNECT 21600	1	X	X	X	X
62	CONNECT 24000	1	X	X	X	X
63	CONNECT 26400	1	X	X	X	X
64	CONNECT 28800	1	X	X	X	X
66	COMPRESSION: CLASS 5	X	X	X	X	X
67	COMPRESSION: V.42 bis	X	X	X	X	X
69	COMPRESSION: NONE	X	X	X	X	X
70	PROTOCOL: NONE	X	X	X	X	X
77	PROTOCOL: LAP-M	X	X	X	X	X
78	CARRIER 31200	X	X	X	X	X
79	CARRIER 33600	X	X	X	X	X
80	PROTOCOL: ALT	X	X	X	X	X
81	PROTOCOL: ALT-CELLULAR	X	X	X	X	X
84	CONNECT 33600	X	X	X	X	X
91	CONNECT 31200	X	X	X	X	X
150	CARRIER 32000	X	X	X	X	X
151	CARRIER 34000	X	X	X	X	X
152	CARRIER 36000	X	X	X	X	X
153	CARRIER 38000	X	X	X	X	X
154	CARRIER 40000	X	X	X	X	X
155	CARRIER 42000	X	X	X	X	X
156	CARRIER 44000	X	X	X	X	X
157	CARRIER 46000	X	X	X	X	X
158	CARRIER 48000	X	X	X	X	X
159	CARRIER 50000	X	X	X	X	X
160	CARRIER 52000	X	X	X	X	X
161	CARRIER 54000	X	X	X	X	X
162	CARRIER 56000	X	X	X	X	X
165	CONNECT 32000	X	X	X	X	X
166	CONNECT 34000	X	X	X	X	X

Message Number Short form	Message text in long form	ATX<0>	ATX<1>	ATX<2>	ATX<3>	ATX<4>
167	CONNECT 36000	X	X	X	X	X
168	CONNECT 38000	X	X	X	X	X
169	CONNECT 40000	X	X	X	X	X
170	CONNECT 42000	X	X	X	X	X
171	CONNECT 44000	X	X	X	X	X
172	CONNECT 46000	X	X	X	X	X
173	CONNECT 48000	X	X	X	X	X
174	CONNECT 50000	X	X	X	X	X
175	CONNECT 52000	X	X	X	X	X
176	CONNECT 54000	X	X	X	X	X
177	CONNECT 56000	X	X	X	X	X
178	CONNECT 230400	X	X	X	X	X
180	CARRIER 28000	X	X	X	X	X
181	CARRIER 29333	X	X	X	X	X
182	CARRIER 30667	X	X	X	X	X
183	CARRIER 33333	X	X	X	X	X
184	CARRIER 34667	X	X	X	X	X
185	CARRIER 37333	X	X	X	X	X
186	CARRIER 38667	X	X	X	X	X
187	CARRIER 41333	X	X	X	X	X
188	CARRIER 42667	X	X	X	X	X
189	CARRIER 45333	X	X	X	X	X
190	CARRIER 46667	X	X	X	X	X
191	CARRIER 49333	X	X	X	X	X
192	CARRIER 50667	X	X	X	X	X
193	CARRIER 53333	X	X	X	X	X
194	CARRIER 54667	X	X	X	X	X

Notes regarding the table:

An **X** in the column indicates that a message is either sent in long or short form (depending on the **ATV** command). In the topmost line, the characters 0 to 4 each indicate the parameters for the commands **ATX0** to **ATX4**.

If there is a number in a column, this indicates that an error message is displayed according to the error number.

9 S Registry

S registries may be read and written using the **ATS<n>** command. (See Chapter 8 “AT Command Set”, command **ATS<n>**) Certain S registries may only be read; into others only a particular range of values may be entered.

If the range of values is exceeded, the modem will report **OK**, although the value was not accepted. We therefore recommend to immediately check modifications by reading (**ATS<n>?**).

Note:

* These registries are stored in the user defaults with **AT&W0** or **AT&W1**.

** The defaults can differ depending on the set country code.

9.1 Overview S Registry

Register	Function	Units	Range	Default
S0*	Rings to auto answer	rings	0-5	5
S1	Ring counter	rings	0-255	0
S2*	Escape character	ASCII	0-255	43
S3	Return character	ASCII	0-127	13
S4	Line feed character	ASCII	0-127	10
S5	Backspace character	ASCII	0-255	8
S6*	Waiting time for dial tone	s	3-7	3
S7*	Waiting time for carrier signal	s	0-100	50
S8*	Dialing pause	s	1-7	2
S9*	Reaction time on carrier signal	0.1 s	1-255	6
S10*	Time between lost carrier signal and hang-up	0.1 s	14-254	14
S12*	ESC prompt delay	0.02 s	0-255	50
S13*	Number of dialing attempts for alarm		1-12	3
S14*	General settings			146
S15*	Data Transmit Controller DTC	1s	0-255	0
S17*	Remote initial character		0-127	42
S21*	Settings for V24			52
S22*	Settings			117
S24*	Time until changing to sleep mode	s	0-255	0
S25	Time for DTR signal	0.01 s	0-255	5
S26	Time between RTS/CTS	0.01 s	0-255	1
S27*	General settings	-		137
S29	Time for modifiers „flash“	10 ms	0-17	17

Register	Function	Units	Range	Default
S30	Time until hang-up for inactivity	10 s	0-255	0
S31*	General settings	-		192
S36*	Resetting the error protocols	-		135
S38	Time until forced hang-up	s	0-255	20
S39*	Flow control	-		3
S40*	General settings	-		104
S41*	General settings	-		195
S46*	Data compression	-		138
S48*	Settings for V42 negotiation phase	-		7
S86	Error result code	-		read only
S91*	Send level	-	0-15	14
S95*	Result code	-		0

9.2 Description S Registry

Note: Registries marked with *) are stored in the user defaults with the command **AT&W**.

S0* Number of ringing tones until automatically going off-hook

Number of rings until the modem goes off-hook

For S0=0 the modem will not go off-hook when a call comes in. The value of S0 can be between 0 and 5.

S1 Ring tone counter

Counter for call ringing. S1 is read-only. S1 will be reset to zero, when the modem answers a call.

S2* Escape

Escape character which causes a switch from data mode to online command input mode. Values larger than 127 will lead to the fact that no ESC character will be recognized.

S3 Return

Carriage Return Character (CR).

S4 Linefeed character

Linefeed character

S5 Backspace character

Backspace character

S6* Waiting period dial tone

Maximum waiting time for the dialing tone. After the modem went off-hook it waits 7 seconds for the dialing tone (fixed for approval purposes). If it detects a dialing tone during this waiting period it will start dialing.

If it does not detect a dialing tone, it will check if dial tone recognition is activated or if the dialing string (Chapter „**AT** Command Set“, command **ATD**) contains the parameter **w**. If the dialing tone detection is not activated, the modem waits for the dialing tone. The waiting time (in seconds) is specified in S6.

The value of the S6 registry can be between 4 and 7 seconds.

S7* Waiting period carrier signal

Wait for the carrier frequency from the other modem. The maximum time for the modem to wait for a response from the other modem is specified in S7. The time starts running as soon as the modem has finished dialing. The value of S7 can be between 0 and 180 seconds.

S8* Dial tone delay

Dial pause time, if a comma is included in the dialing string. If there is a comma in the dialing string, the modem will wait during the dialing procedure, until the time specified in S8 (in seconds) has run out. The value of S8 can be between 1 and 7 seconds.

S9* Reaction time carrier signal

DCD response time for the carrier frequency from the other modem. The DCD output of the RS232 interface (CT109) of the modem switches to ON, when the carrier frequency from the other modem is detected before the time defined in S9 (in tenth of seconds) runs out. S9 must be smaller than S10.

S10* Time period between lost carrier signal and hang up

The time which leads to termination after carrier frequency loss. In S10, the time is specified in tenth of seconds, which the modem awaits to disconnect, if it can't detect the carrier frequency from the other modem anymore.

S12* Transmission clock of the ESC characters

Minimum pre and post run time and maximum interim time in 1/50 of seconds between two characters. This must be observed, if the modem is supposed to detect an abort sequence (usually +++).

S13* Number of dialing attempts to send the message

Bit	Meaning	
Bit 0 – 3	Number of dialing attempts	Range of values:1...12 Default value: 3 S13 determines the number of attempts to send the message. Note: The limitation to a maximum of 12 attempts is necessary for approval purposes (black listing).
Bit 4 - 7	Reserved	

S14* General settings

Bit	Meaning	
Bit 0	Reserved	
Bit 1	Echo on inputs	Command echo 0: Echo off 1: Echo on
Bit 2	Reserved	
Bit 3	Result format	Result codes: 0: Message numbers (ATV0) 1: Message texts (ATV1)
Bit 4	Reserved	
Bit 5	Tone/pulse dialing	Tone/pulse 0: Tone dialing (ATT) 1: Pulse dialing (ATP)
Bit 6	Reserved	
Bit 7	Originate/answer	Originate/answer 0: Answer mode 1: Originate mode

S15* DTC Time Settings

The idle connection control is a function integrated in the firmware which monitors the data transmission in online mode. This function prevents the modem to stay online for an unlimited amount of time, although no data is being transmitted anymore.

In the registry S15, any time period between 1 and 255 seconds may be entered. If S15 is set to 0, the idle connection control is switched off.

The timer will run immediately after the modem goes off-hook. As soon as the timer has run out, a modem reset is performed (which will forcibly lead to the hanging up of the modem).

S17* Initial character for remote configuration

In S17, the ASCII code of a character which is used to start the remote configuration, is defined. Values >127 switch the remote configuration off completely. The default setting in S17 is "42", which equals the ASCII character "*". This means that the remote configuration is started with the Escape character sequence

<Pause> ** <Pause>**.

Note: The number of characters in the Escape sequence is fixed to "4" characters).

S21* Settings for V24

Bit	Meaning	
Bit 0.1	Reserved	
Bit 2	CTS behavior	CT106 (CTS) behavior: 0: see AT\K0 1: see AT&R1
Bit 3-4	DTR behavior	CT108 (DTR) behavior: 0: see AT&D0 1: see AT&D1 2: see AT&D2 3: see AT&D3
Bit 5	DCD behavior	CT109 (DCD) behavior: 0: see AT&C0 1: see AT&C1
Bit 6	DSR behavior	CT107 (DCD) behavior: 0: see AT&S0 1: see AT&S1
Bit 7	Reserved	Reserved

S22* Speaker system settings

Bit	Meaning	
Bit 0.1	Loudspeaker volume	Speaker volume: 0: Off (ATL0) 1: Silent (ATL1) 2: Medium (ATL2) 3: Loud (ATL3)
Bit 2-3	Loudspeaker function	Speaker control: 0: Off (ATM0) 1: On until carrier (ATM1) 2: Always on (ATM2) 3: On at establishing
Bit 4-6	Error reporting group	Limit result codes: 0: see ATX0 4: see ATX1 5: see ATX2 6: see ATX3 7: see ATX4
Bit 7	Stores the setting of AT*L	

S24* Time period until switching into sleep mode

The time after which the modem switches to energy saving mode (sleep) during inactivity is determined (in seconds) in S24. The energy saving mode will be quit as soon as characters are sent to the modem, or when a call comes in.

Note: **When the modem is in sleep mode, it is necessary to send an “AT” command before sending other commands. This first “AT” command may not be answered with “OK”. Further AT commands may be entered immediately.**

S25 Time period for DTR signal

Time period, in which a modem waits without a DTR signal before it hangs up (1/100 seconds).

S26 Time period between RTS/CTS

Time period between RTS and CTS activation in 1/100 seconds.

S27* General settings

Bit	Meaning	
Bit 0-3	RS232-Mode	Asynchronous Mode Selection: 0: see AT&M0 or AT&Q0 9: see AT&Q5 10: see AT&Q6
Bit 4,5	Reserved	
Bit 6	CCITT or Bell Modulation	CCITT/Bell Select 0: CCITT Modulation 1: Bell Modulation
Bit 7	Remote Control Status	Remote control 0: Remote control OFF 1: Remote control ON

S29 Time period for modifier “flash”

Sets the time period in tenths of seconds, after which the modem hangs up due to a flash in the dialing string.

S30 Time period until hang up due to silence

Time period, in which the modem waits without activity before hanging up. Units in seconds (only for FAX Class 1).

S31* General settings

Bit	Meaning	
Bit 0	Reserved	
Bit 1	Description Connect message	0: 3-line message (\V0) 1: Expanded 1-line message (\V1)
Bit 2-3	Error correction Messages	Messages: 0: Only PC baud rate 1: PC and phone baud rate (ATW1) 2: Only phone baud rate (ATW2)
Bit 4-7	Reserved	

S36* Reset of error logs

Bit	Meaning	
Bit 0..2	determines what happens if an attempt to establish a V.42 LAP-M connection fails. It is connected to the registry S48.	0 Modem hangs up 1 Modem stays online and establishes a direct mode connection. 2 Reserved 3 Modem stays online and establishes a direct mode connection. 4 Modem attempts to establish a MNP connection. In case of failure it hangs up. 5 Modem attempts to establish a MNP connection. In case of failure a direct mode connection is established. 6 Reserved 7 Modem attempts to establish a MNP connection. In case of failure a normal mode connection is established.
Bit 3.0.5	SMS type	0: normal fixed network modem (AT*M0) 1: D1 and E networks (AT*M1) 4: D2 network (AT*M4) 5: Fax (AT*M5) 6: Fixed network SMS (AT*M6)
Bit 6	Key abort	0: Key abort activated (AT%B0) 1: Key abort deactivated (AT%B1)
Bit 7	Call acceptance	1: Call answer not locked (AT*A1) 0: Call acceptance locked (AT*A0)

S38 Time period until forced hang up

Maximum time left for the buffers to empty their data, after a command to hang up has been received. Only applies to error corrected connections.

S39* Flow control

Selection of the data flow control between the PC and the modem

- S39=0 No data flow control (**AT&K0**)
 S39=3 RTS/ CTS data flow control (**AT&K3**)
 S39=4 XON/ XOFF data flow control (**AT&K4**)
 S39=5 Transparent XON data flow control (**AT&K5**)
 S39=6 RTS/CTS and XON/XOFF data flow control

S40* General settings

Bit	Meaning	
Bit 0	Reserved	
Bit 1	Reserved	
Bit 2	Reserved	
Bit 3-5	Break handling	Break handling 0: see AT\K0 1: see AT\K1 2: see AT\K2 3: see AT\K3 4: see AT\K4 5: see AT\K5
Bit 6-7	MNP block size	MNP block size 0: 64 characters (AT\A0) 1: 128 characters (AT\A1) 2: 192 characters (AT\A2) 3: 256 characters (AT\A3)

S41* General settings

Bit	Meaning	
Bit 0.1	Select compression type	Compression Selection 0: No compression (AT%C0) 1: MNP5 (AT%C1) 2: V42bis (AT%C2) 3: MNP5 or V.42bis (AT%C3)
Bit 2	Auto retrain	Auto retrain control 0: No auto retrain (AT%E0) 1: Auto retrain (AT%E1)
Bit 3	Reserved	
Bit 4	Reserved	
Bit 5	Reserved	
Bit 6	Fall back/fall forward	FB/FF control 0: No FB/FF 1: FB/FF (AT%E2)
Bit 7	Reserved	

S46* V.42bis Data Compression

- S46=136 No data compression
- S46=138 V.42bis data compression on

S48* V.42bis Connection setup protocol

- S48=0 Only LAPM connection possible
- S48=7 LAPM or MNP 4 connection
- S48=128 Connection protocol as laid down in S36

S86 Error event code

When a connection fails (**NO CARRIER**), an event code is written into this registry.

- S86=0 Normal disconnect, no error
- S86=4 Carrier lost
- S86=5 No establishing of an error-corrected (V.42) connection
- S86=6 No extensions could be negotiated
- S86=7 Remote terminal only supports synchronous modems
- S86=8 No joint framing detected
- S86=9 No protocol could be established
- S86=10 Invalid answer when negotiating extensions
- S86=11 No synchronous marks received from remote terminal
- S86=12 Normal disconnection by remote terminal
- S86=13 Remote terminal didn't respond any more (ten attempts)
- S86=14 Protocol error
- S86=15 DTR drop
- S86=16 Remote terminal demanded clear-down (GSTN clear-down)
- S86=17 Inactivity timer expired
- S86=18 Desired speed is not supported
- S86=19 Long space disconnect
- S86=20 Key abort (character was sent during connection setup)
- S86=22 No connection setup possible
- S86=23 Clear-down after 3 retrains
- S86=25 Termination of the connection by the remote terminal or by a phone connected in series
- S86=26 Remote terminal hung up

S91* Transmit Level

The value for the transmit level of the modem is stored in the S91 registry. The value can be set between 0 and 15. The connection can in some cases be improved by decreasing the transmit level.

S91=0 Transmit level 0 dBm

S91=15 Transmit level – 15 dBm

Note: The range and the default value depend on the country settings (**AT+GCI**).

S95* Result Code Control – Result code

Bit	Meaning
Bit 0	CONNECT message with line speed
Bit 1	CONNECT/ARO message for error corrected connection
Bit 2	CARRIER messages enabled (messages 40 – 47)
Bit 3	PROTOCOL messages enabled (messages 70 – 80)
Bit 4	Reserved
Bit 5	COMPRESSION message enabled (messages 66 - 69)
Bit 6	Reserved
Bit 7	Reserved

10 Sending of SMS as Fax or E-mail

Chapter 11 shows an overview of network providers for German-speaking countries (Germany, Austria, and Switzerland). All necessary information is available from the customer service center of the provider.

10.1 SMS as Fax

Network provider	Service center	Phone number format	Example	SMS format
T-COM (Germany)	01930100	99+area code+ Phone number	990941586920	This is a test
A1 (Austria)	43900664914	Area code+phone num- ber	0941586920	This is a test
Swisscom (Switzerland)	+41794998123	Area code+phone num- ber	0941586920	*FAX#This is a test

10.2 SMS as E-Mail

Network provider	Service center	Phone number	SMS format	E-mail address	Example
T-COM (Germany)	01930100	8000	E-mail address+space+text	abc@defg.de	abc*defg.de This is a test
A1 (Austria)	43900664914	E-mail address	Text		This is a test
Swisscom (Switzerland)	+41794998123	555	E-mail address+space+text	abc@defg.de	abc*defg.de This is a test

11 FAQ

In the following some questions are described, which – from experience – may occur during the installation.

Problem:	Possible cause:	Remedy
The modem does not accept calls.	Automatic call acceptance is deactivated.	Enter the following commands in the terminal program: ATS0=2 AT*A1
The key entries are not displayed in the terminal program.	The display of the key entries (echo) is deactivated.	Activate the echo with ATE1 .
The modem starts dialing after the dialing command ATD has been entered and reports the error “No Dialtone”.	The phone line is interrupted.	Check the phone line.
The modem starts dialing after the dialing command ATD has been entered and reports the error “No Dialtone”.	The modem is operated at a PBX. The PBX requires that a code number is dialed to establish a connection or that the flash function is activated, before the dialing tone is heard. The modem, however, is awaiting a ring back signal already before the first digit is dialed.	After the leading digit was dialed without a ring back signal, inserting a W into the dialing string will re-activate the ring back signal detection. (Example ATD0W12345). This problem can be solved by blind dialing (dialing without ring back signal) with the ATX3 command or by inserting the character > into the dialing string. (See Chapter 9, command ATX , command ATD)
After the ATD dialing command, the modem will not start dialing right away.	The dialing lock of 30 seconds is active.	See Chapter 5.2.8 “Dial-up Delay”.

Problem:	Possible cause:	Remedy
It is not possible to establish a phone connection.	The modem dials with the pulse dialing method instead of the required tone dialing method, or vice versa.	You can determine if your phone system dials with pulses or tones: If you hear a rattling on the line during dialing, you are using pulse dialing. The dialing types can be switched with the commands ATDP or ATDT . See also Chapter 9 “AT Command Set”, commands ATDP , ATDT , ATP , ATT .
The modem can send data, but can't receive data.	The data flow control settings (RTS/CTS) are wrong.	See Chapters 5.2.4 to 5.2.6 “Data flow control”.
The modem does not cooperate with a particular communication program.	The communication program expects a certain data flow control type. The modem has not been set to the required type.	Setting the modem to the required data flow control type will solve the problem. Most of the time, the used communication program allows the creation of an initialization string, in which the necessary settings can be entered. This string is transmitted to the modem during the program start. See also the manual for the used software and Chapters 5.2.4 to 5.2.6 “Data flow control”.
The modem cannot communicate with another modem, or only with errors.	The other modem uses a transmission protocol, which the local modem cannot understand.	Using the data compression type and error protocol required by the other modem will solve the problem. (See also Chapters 5.3 and 5.4 “Error Correction” and “Data Compression”).

12 Safety Instructions

12.1 General



Please comply with these instructions!

- All areas that can be opened are maintenance areas. Unauthorized opening of a maintenance area and inappropriate repairs may endanger the user.
- The INSYS Modem 336/56k 4.1 (UL) may not be used in wet environments, damp rooms or close to water.
- The device should not be used during a thunderstorm, as this could result in electrical shock.
- The INSYS Modem 336/56k 4.1 (UL) may not be used in wet environments, damp rooms or close to water.
- Please also take care not to let liquids seep into the modem as this may lead to short circuits.
- If a power failure occurs the device will not be operational. We recommend providing a separate circuit for the INSYS Modem 336/56k 4.1 (UL). If other devices experience short circuits, the INSYS Modem 336/56k 4.1 (UL) will thus not be inoperative.
- Using another power supply unit could damage the modem; in this event, the manufacturer will assume no liability.
- We recommend installing a suitable overvoltage protection.

12.2 SMS

The sending time of an SMS from the sender to a recipient depends on the pertinent provider of the service number. Depending on the degree of utilization and the time of day, an SMS may be on the way for an extended period.

12.3 Cleaning

- For cleaning purposes, use a slightly damp cloth or an antistatic cloth.
- Do not use solvents.
- In any case, please take care that no moisture seeps into the modem as this could damage the modem.

13 Technical Data

13.1 Mechanical Features

	INSYS modem 336/56k 4.1 (UL)
Weight	8.82 oz
Dimensions (maximum)	w x d x h = 55 x 110 x 75
Temperature range	32°F..131°F
Protection class	Housing IP 40/ Terminal IP 20
Humidity	0 - 95% non-condensing

13.2 Power Supply

All specified technical data was measured with a nominal input voltage, full load, and an ambient temperature of 77 °F. The threshold value tolerances are subject to the typical fluctuations.

To operate the INSYS modem, a suitable device protection must be used.

Power supply: 10..60 V DC

Power input: approx. 2.5 W (during connection)

Current consumption:

Input voltage	Current (closed circuit)	Current (connection)	Maximum startup current
10 V DC	200 mA	240 mA	300 mA
24 V DC	100 mA	110 mA	150 mA

For the INSYS Modem 56k 4.1 UL, the following applies:

Attention! The modem voltage supply must be protected by a UL-certified fuse, type T5A H 250V.

13.3 Serial interface

Layout of the 9-pin D-SUB jack




Description of the signals on the 9-pin D-SUB connector on DCE side:

9-pin D-Sub DCE Pin No.	Description	AT com- mand	Function	CCITT V-24	EIA RS232	DIN 66020	E/A DCE to DTE
1	DCD	AT&C	Data Carrier Detect	109	CF	M5	O
2	RXD		Receive Data	104	BB	D2	O
3	TXD		Transmit Data	103	BA	D1	I
4	DTR	AT&D	Data Terminal Ready	108	CD	S1	I
5	GND		Ground	102	AB	E2	
6	DSR	AT&S	Data set ready	107	CC	M1	O
7	RTS	AT&R	Request to send	105	CA	S2	I
8	CTS	AT&K	Clear to send	106	CB	M2	O
9	RI		Ring Indication	125	CE	M3	O

13.4 Possible Interface Speeds

Baud rate in bps		
300	4.800	28.800
600	9.600	38.400
1.200	14.400	57.600
2.400	19.200	115.200

13.5 Telephone Interface

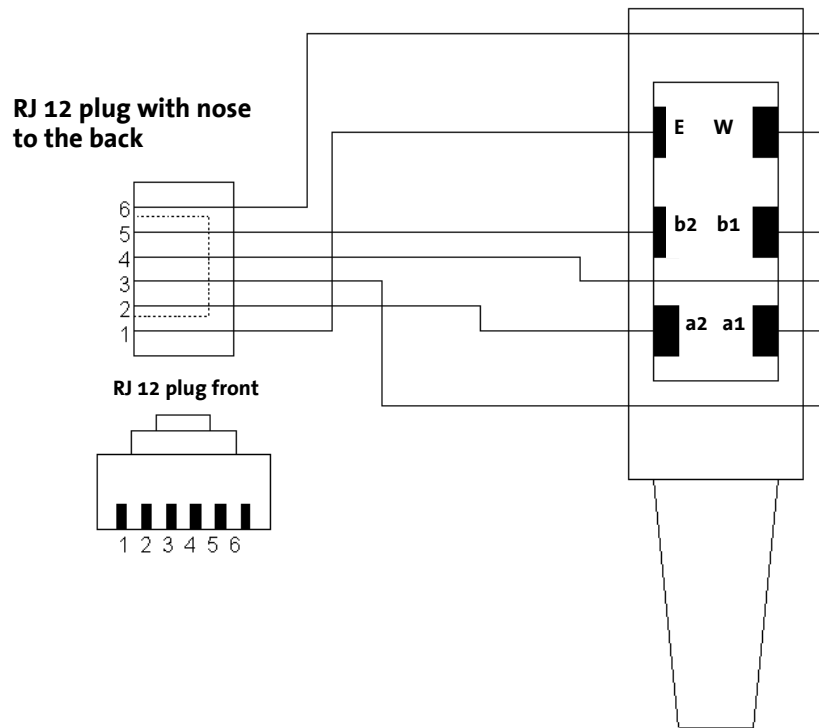

Layout of the RJ12 Connector and the RJ45 Jack

Pin	Description	Pin	Description
1	NC	4	b1
2	a2	5	b2
3	b1	6	NC

Meaning of the Signals:

- a1, b1: Incoming phone lines (e.g. exchange connection or PBX)
- a2, b2: they are used to connect a telephone in series. In idle state, a2 and b2 are connected with a1 and b1 via a loop current connector. a2 and b2 are disconnected as soon as the modem occupies the line.

For the INSYS Modem 56k 4.1 UL, the following applies:

Attention! The used phone cords must have the type AWG 26. Devices connected to the RJ45 or the J30 20-17 connection must comply with the requirements of UL 60950, section 6.

13.6 Standards

13.6.1 ITU Standards (CCITT)

ITU Standards (CCITT)	Meaning
V.21	Transmission with 300 bps (duplex)
V.22	Transmission with 1,200 bps (duplex)
V.22bis	Transmission with 2,400 bps (duplex)
V.23	Send with 75 bps and receive with 1,200 bps and vice versa
V.23 half-duplex	Send or receive with 1,200 bps (half duplex)
V25bis	Alternate command set for AT command set
V.32	Transmission with 9,600 bps or (fallback) 7,200, 4,800 bps.
V.32bis	Transmission with 14,400 bps or (fallback) 12,000, 9,600, 7,200, 4,800 bps.
V.FC	Transmission with 28,800 bps or (fallback) 26,400, 24,000, 21,600, 19,200, 16,800, 14,400 bps.
V.34	Transmission with 28,800 bps or (fallback) 26,400, 24,000, 21,600, 19,200, 16,800, 14,400 bps.
V.34+	Transmission with 33,600 bps or (fallback) 31,200, 28,800, 26,400, 24,000, 21,600, 19,200, 16,800, 14,400 bps.
V.42	Error protection method for DCE's with asynchronous-to-synchronous conversion
V42bis	Data compression method
V.90	Receive with 56,000 bps or (fall back) 54,667, 53,333, 52,000, 50,667, 49,333, 48,000, 46,667, 45,333, 42,667, 41,333, 40,000, 38,667, 37,333, 36,000, 34,667, 33,333, 32,000, 30,667, 29,333, 28,000 bps. Send with 33,600 bps or (fall back) 31,200, 28,800, 26,400, 24,000, 21,600, 19,200, 16,800, 14,400 bps.
V.92	Receive with 56,000 bps or (fall back) 54,667, 53,333, 52,000, 50,667, 49,333, 48,000, 46,667, 45,333, 42,667, 41,333, 40,000, 38,667, 37,333, 36,000, 34,667, 33,333, 32,000, 30,667, 29,333, 28,000 bps. Send with 48,000 bps or (fall back) 46,667, 45,333, 42,667, 41,333, 40,000, 38,667, 37,333, 36,000, 34,667, 33,333, 32,000, 30,667, 29,333, 28,000 bps.

(bis = French: secondly) = extended

Bps indicates the transmitted bits per second.

Duplex means that the transmission takes place into both directions.

13.6.2 Supported Standards

INSYS Modem 336	V.42bis, V.42, V.32bis, V.32, V.23, V.22, V22 bis, V21, V.34+, V.FLC
INSYS Modem 56k	As 336 PRO, additional V.90

13.7 Reset

A reset is possible via the screw terminal marked **Reset**, using an external device. A low potential must be applied at the terminal for at least 3 seconds.

Alternatively, the reset key should be pressed at least 3 seconds to trigger a reset.

13.8 Digital Inputs and Outputs

13.8.1 Alarm input

LOW 0 .. 1 V

HIGH 4 .. 12 V

Input current from LOW to internal +5V: Type 0.5 mA

13.8.2 Switch output

Potential-free relay switches

maximum switch voltage: 30 V (DC) / 42 V (AC)

maximum current load: 1 A (DC) / 0.5 A (AC)

13.9 Certifications

The INSYS Modem336/56k 4.1 (UL) bears the CE symbol of conformity. This symbol indicates that on account of its design and implementation, the INSYS Modems 336 4.1 or the INSYS Modem 56k 4. are in compliance with the currently valid versions of the following EC directives:

Conformity: A conformity declaration regarding CE for your device may be obtained from insys@insys.de on request.

- 89/336/EEC (EMC directive)
- 73/23/EEC (Low voltage directive)
- 91/263/EEC (Telecommunications devices directive)

Approvals:

- R&TTE
- CTR 21 (Europe)
- CE

Applies only to INSYS Modem 56k 4.1 UL:

- UL certification

14 Country Codes

Adjust the modem to local requirements using the command
AT+CGI=<countrycode>

All other settings should be carried out **after** the country code has been selected, because some factory settings depend on the country.

Country	INSYS modem 336/56k 4.1 (UL)	
	Standard countries	Extended country groups
Europe TBR21*)	FD (default)	FD (default)
Egypt		36
Ethiopia	FE	
Albania		B8
Algeria	FE	
Andorra	FD	FD
Argentina		07
Australia	09	
Bangladesh	FE	
Belgium*	FD/OF	FD
Belize	FE	
Benin	FE	
Burma (Myanmar)	FE	
Bolivia	FE	
Bosnia Herzegovina	FE	
Brazil	16	
Brunei	FE	
Bulgaria		1B
Chile		25
China		26
Costa Rica	FE	
Denmark*	FD/31	FD
Germany	FD/42	FD
Dominican Republic		33
Ecuador	FE	
Ivory Coast	FE	
El Salvador	FE	
Estonia		F9

Country	INSYS modem 336/56k 4.1 (UL)	
	Standard countries	Extended country groups
Finland*	FD/3C	FD
France*	FD/3D	FD
Gabon	3D	
Ghana	FE	
Greece*	FD/46	FD
Greenland	31	
Great Britain*	FD/B4	FD
Guatemala	FE	
Honduras	FE	
Hong Kong		50
India		53
Indonesia		54
Ireland*	FD/57	FD
Iceland*	FD/52	FD
Israel		58
Italy*	FD/59	FD
ITU/Taiwan	FE	
Jamaica	B4	
Japan	00	
Yemen	FE	
Jordan	FE	
Cambodia	FE	
Cameroon	3D	
Canada	20	
Kazakhstan		B8
Quatar	98	
Kenya	B4	
Colombia		27
Republic of Korea		61
Croatia		FA
Kuwait		62
Laos	FE	
Latvia	FD	FD
Lebanon		64

Country	INSYS modem 336/56k 4.1 (UL)	
	Standard countries	Extended country groups
Liechtenstein*	FD	FD
Lithuania	FE	
Luxembourg*	FD/69	FD
Madagascar	FE	
Malawi	B4	
Malaysia		6C
Malta	B4	
Mauritania	FE	
Mauritius	B4	
Macedonia	FE	
Mexico	73	
Monaco	FD	FD
Moldavia		B8
Montenegro	FE	
New Zealand		7E
Nicaragua	FE	
Netherlands*	FD/7B	FD
Niger	3D	
Nigeria		81
Norway*	FD/82	
Oman	FE	
Austria*	FD/0A	FD
Pakistan		84
Panama		85
Paraguay		87
Peru	FE	
Philippines		89
Poland	8A	
Portugal*	FD/8B	FD
Reunion	3D	
Romania	8E	
Russian Federation		B8
San Marino*	FD	FD
Zambia	FE	

Country	INSYS modem 336/56k 4.1 (UL)	
	Standard countries	Extended country groups
Saudi Arabia	98	
Sweden*	FD/A5	FD
Switzerland	FD/A6*	FD
Senegal		99
Serbia	FE	
Singapore		9C
Zimbabwe	B4	
Slovak Republic	FB	
Slovenia	FC	
Spain*	FD/A0	FD
Sri Lanka		A1
South Africa		9F
Taiwan	FE	
Tanzania	B4	
Thailand		A9
Czech Republic	2E	
Turkey	AE	
Tunisia	FE	
Uganda	B4	
Ukraine	FE	
Hungary	51	
Uruguay		B7
USA	B5	
Venezuela		BB
United Arab Emirates		B3
Belarus	FE	
Cyprus		2D

*) **The standard TBR21 applies to all public phone networks in EU countries (Belgium, Denmark, German, Finland, France, Greece, Great Britain, Ireland, Italy, Luxembourg, Netherlands, Austria, Portugal, Sweden, Spain), as well as in Switzerland, Liechtenstein, Norway and Iceland. Only old telecommunications systems require the individual country to be set explicitly.**

